

# DPU Series

## Features

- Fast response speed and high accuracy by high-speed CPU
- Accurate feedback control (static current, static voltage, static power) by RMS measurement
- Phase control and zero-crossing cycle control (fixed/variable cycle) method for various load control
- Protects inner circuit by built-in rapid fuse
- Remote monitoring and remote control  
Supports Modbus RTU protocol by RS485 communication
- Built-in customizable 6 digital inputs
- Basic variable alarm outputs; current error, heater part (parts of heater break detection), etc.
- Supports multi input of control input signal (current, voltage, potentiometer, etc)
- Enables to install control part separately
- Applicable load: all loads such as super kanthal, platinum, molybdenum, carbon, halogen lamp, chrome, nickel, etc.



Please read "Safety Considerations" in operation manual before using this unit.

## Ordering Information

DPU 1 2 A - 025 R

Option	R	RS485 communication		
	D	Remote Display Unit		
	A	Remote Display Unit + RS485 communication		
	N	No option		
Rated current capacity	025	25A	200	200A
	040	40A	250	250A
	050	50A	350	350A
	070	70A	400	400A
	080	80A	500	500A
	100	100A	600	600A
	120	120A		
	150	150A		
Size		1-phase	3-phase	
	A	0 to 70A	0 to 50A	
	B	80 to 200A	70 to 200A	
	C	250 to 350A		
	D	400 to 600A		
	E	Option		
Power supply	1	110VAC		
	2	220VAC		
	3	380VAC		
	4	440VAC		
Control phase	1	1-phase		
	3	3-phase		
Item	DPU	Digital Power Controller Unit		

# Digital Thyristor Power Controller

## ■ Size type

### ◎ 1-phase

(unit: mm)

Size	Current capacity	W	H	D	P1	P2	Allowable cable thickness
A	0 to 70 A	97	260	170	82	150	Min. AWG 4
B	80 to 200 A	140	280	174	127	150	Min. AWG 4/0
C	250 to 350 A	213	338	179	193	200	Min. AWG 300MCM
D	400 to 600 A	278	418	212	261	200	Min. AWG 500MCM

### ◎ 3-phase

(unit: mm)

Size	Current capacity	W	H	D	P1	P2	Allowable cable thickness
A	0 to 50A	140	306	200	127	150	Min. AWG 4
B	70 to 200A	213	365	217	195	200	Min. AWG 4/0
C	250 to 350A	278	450	227.5	261	200	Min. AWG 300MCM
D	400 to 600A	427	528	275.5	405	330	Min. AWG 500MCM

## Specifications

Series	DPU	
Number of phases	1-phase	3-phase
Power supply	110VAC~ / 220VAC~ / 380VAC~ / 440VAC~ (FAN and control power 220VAC~ 50/60Hz separately)	
Allowable voltage	90 to 110% of rated voltage	85 to 115% of rated voltage
Rated frequency	50/60Hz (auto recognition), allowable frequency range: ±2Hz	
Min. load current	1A	
Output range	Phase control: 5 to 98%, Z.C. control: 0 to 100%	
Control method <sup>※1</sup>	<ul style="list-style-type: none"> <li>Phase control: Normal control (Non-Feedback), static voltage/static current/static power control (Feedback)</li> <li>Cycle control (Z.C.): Fixed cycle control, Variable cycle control</li> <li>ON/OFF control (Z.C.)</li> </ul>	
Load	<ul style="list-style-type: none"> <li>Phase control: resistance load, inductive load</li> <li>ON/OFF, Cycle control: resistance load</li> </ul>	
Power consumption	Max. 7W (except FAN operation power)	Max. 10W (except FAN operation power)
Display method	<ul style="list-style-type: none"> <li>Display value and SV display: 7-segment 4-digit</li> <li>Status display: 4 LED</li> <li>Display value percentage display: 11 LED Bar</li> </ul>	<ul style="list-style-type: none"> <li>Display value and SV display: 7-segment 4-digit</li> <li>Status display: 6 LED</li> <li>Display value percentage display: 11 LED Bar</li> </ul>
Output accuracy	<ul style="list-style-type: none"> <li>Static voltage feedback control: Within ±3% F.S. of rated voltage (within variable ±10% F.S. of rated voltage)</li> <li>Static current feedback control: Within ±3% F.S. of rated voltage (within variable 1 to 10 times of rated resistance)</li> <li>Static power feedback control: Within ±3% F.S. of rated voltage (within variable ±10% F.S. of rated voltage and within variable 1 to 10 times of rated resistance)</li> <li>Normal control: within ±10% F.S. of rated voltage</li> </ul>	
Set method	By front keys, By communication	
Control input	<ul style="list-style-type: none"> <li>Auto: 4-20mA / 0-20mA / 0-5VDC≐ / 1-5VDC≐ / 0-10VDC≐ / voltage pulse (0/12VDC≐ (24VDC≐)) / no-voltage input (ON/OFF) / communication input (RS485)</li> <li>Manual: inside 10kΩ adjuster, outside 3 to 10kΩ adjuster (min. 2W)</li> </ul>	
Digital input(DI)	AUTO/MAN switching, RUN/STOP switching, RESET, Output holding, SP setting (SP1 to 6)	
Display content	Control input, load voltage, load current, load power, load resistance, power supply frequency	
Min. display output	Min. 2.5% of rated voltage/current	
Option output	RS485 communication output (Modbus RTU method), [max. 32 units]	
Dielectric strength	2,000VAC 50/60Hz for 1 min (between input terminal and power terminal)	
Vibration	0.75mm amplitude at frequency of 5 to 55Hz (for 1 min) in each X, Y, Z direction for 2 hours	
Insulation resistance	Over 200MΩ (at 500VDC megger)	
Noise immunity	±2kV the square wave noise (pulse width 1μs) by the noise simulator	
Environment	Ambient temperature	-10 to 50°C, storage: -20 to 80°C
	Ambient humidity	5 to 90%RH, storage: 5 to 90%RH
Approval	CE	
Weight <sup>※2</sup>	<ul style="list-style-type: none"> <li>A size : Approx. 3.2kg (approx. 3.0kg)</li> <li>C size : Approx. 12.1kg (approx. 11.0kg)</li> </ul>	<ul style="list-style-type: none"> <li>B size : Approx. 5.6kg (approx. 3.0kg)</li> <li>D size : Approx. 19.3kg (approx. 11.0kg)</li> </ul>
	<ul style="list-style-type: none"> <li>A size : Approx. 7.6kg (approx. 6.5kg)</li> <li>C size : Approx. 21.1kg (approx. 20.0kg)</li> </ul>	<ul style="list-style-type: none"> <li>B size : Approx. 13.0kg (approx. 11.5kg)</li> <li>Approx. size : Approx. 35.7kg (approx. 30.8kg)</li> </ul>

※ 1. Variable cycle control is only for 1-phase model.

※ 2. The weight includes packaging. The weight in parenthesis is for unit only.

※ Environment resistance is rated at no freezing or condensation.

A. Recorders

B. Indicators

C. Converters

D. Controllers

E. Thyristor Power Controllers

F. Pressure Transmitters

G. Temperature Transmitters

H. Accessories

DPU


DPUS

# DPU Series


## Connections

### ■ 1-phase


#### ● A Size

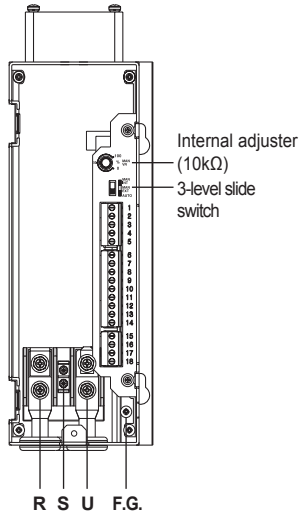



#### ● B Size

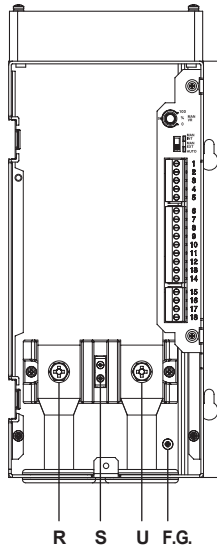

#### ● C Size

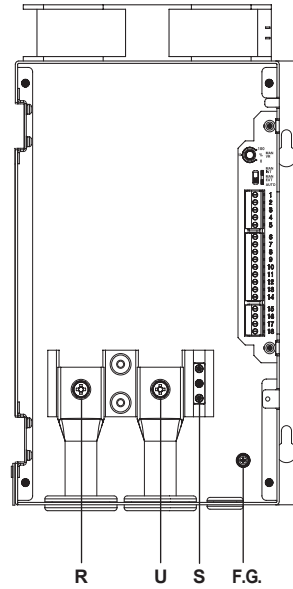

#### ● D Size

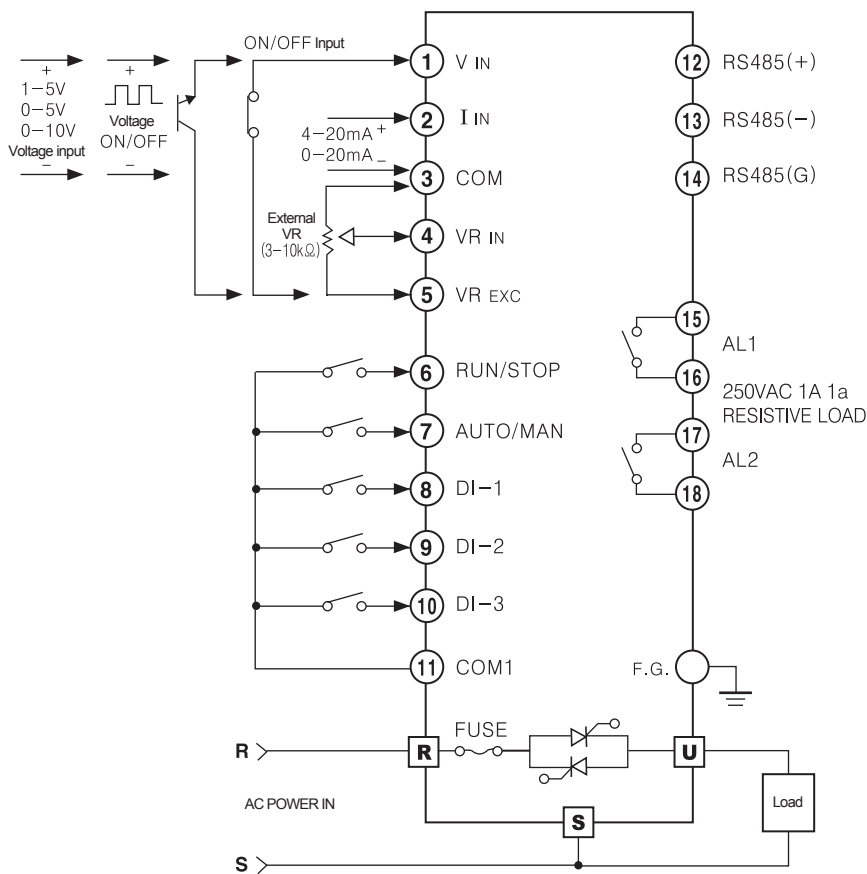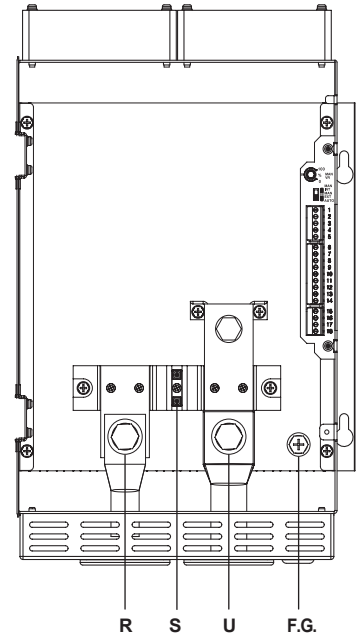


- Do not mix noise to input cable. It is recommended to use shield cable, twisted cable as input cable for effective noise.
- If there is possible to affect inductive noise, it is recommended to use shielded cable at high-frequency power for effective noise.
- DI input switch should be for low current and ON resistance should be max. 20Ω (including cable resistance).
- DI input terminals are COM, DI-1 to 3, RUN, AUTO.
- For remote display unit option model, use connection cable as our standard cable.
- When connecting ⑩, ⑪, it operates as MANUAL. When connecting, ⑥, ⑦, ⑩, it operates AUTO.


# Digital Thyristor Power Controller

## 3-phase


### A Size

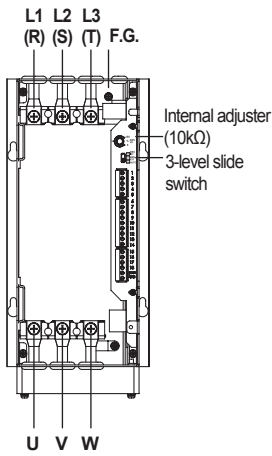


### B Size

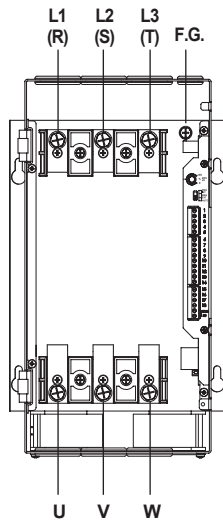

### C Size

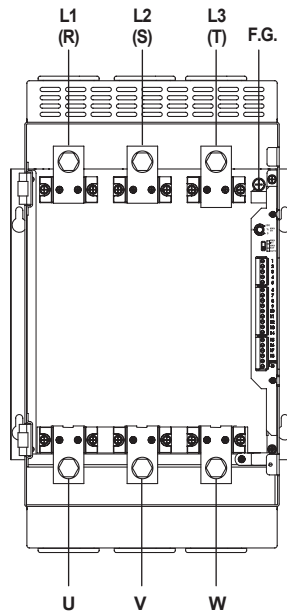

### D Size

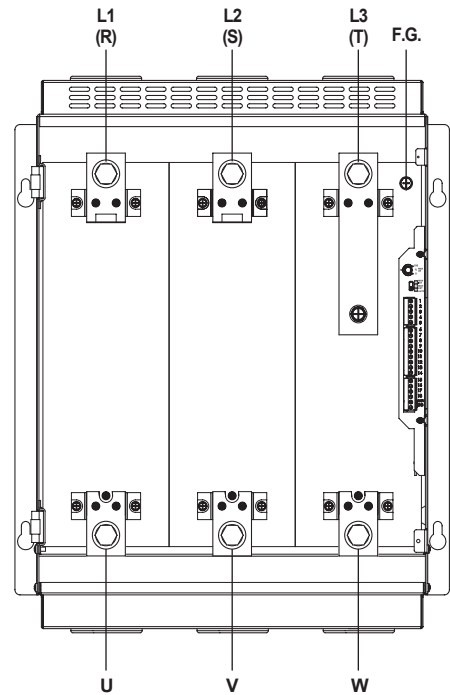

A. Recorders

B. Indicators

C. Converters


D. Controllers

E. Thyristor Power Controllers

F. Pressure Transmitters

G. Temperature Transmitters

H. Accessories

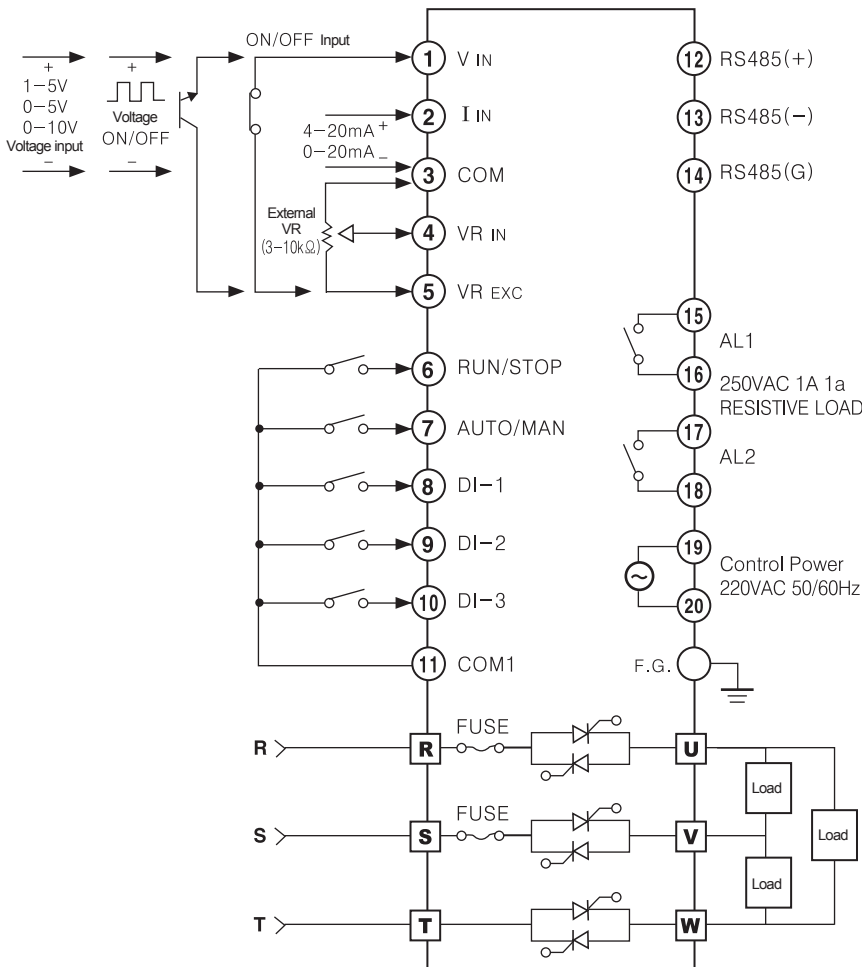

- Do not mix noise to input cable. It is recommended to use shield cable, twisted cable as input cable for effective noise.
- If there is possible to affect inductive noise, it is recommended to use shielded cable at high-frequency power for effective noise.
- DI input switch should be for low current and ON resistance should be max. 20Ω (including cable resistance).
- DI input terminals are COM, DI-1 to 3, RUN, AUTO.
- For remote display unit option model, use connection cable as our standard cable.
- When connecting ⑥, ⑩, it operates as MANUAL. When connecting, ⑥, ⑦, ⑩, it operates AUTO.

DPU

DPUS

# DPU Series


## Dimensions

### ■ 1-phase


(unit: mm)

#### ● A Size: DPU1□A-25 / 40 / 50 / 70

※ 25A, 40A, 50A are not attached a fan.

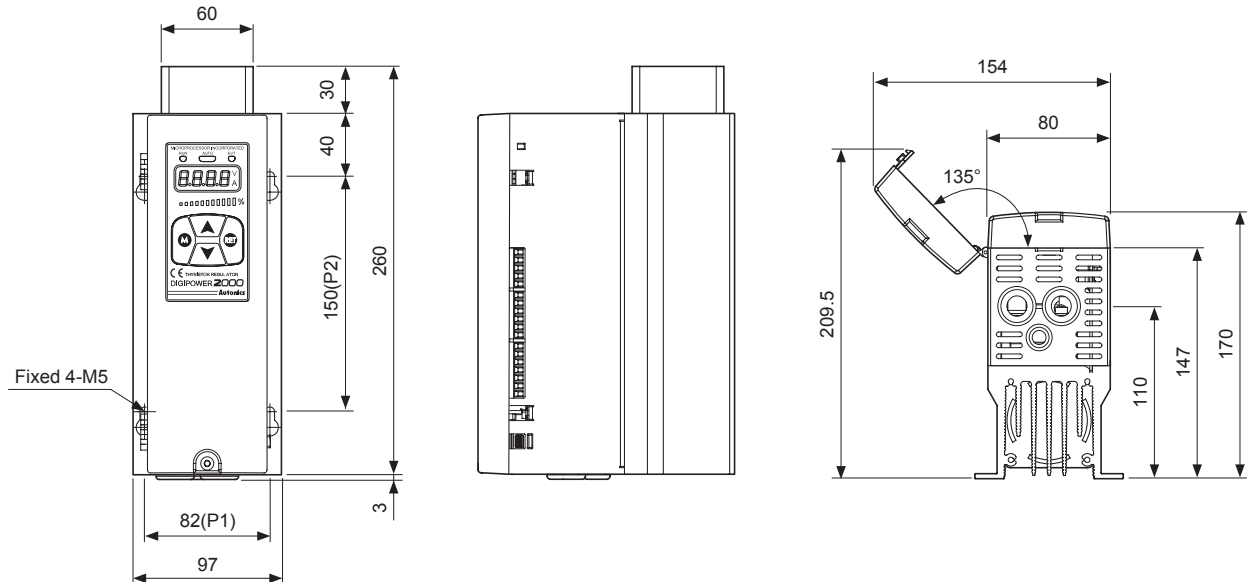


#### ● B Size: DPU1□B - 80 / 100 / 120 / 150 / 180 / 200

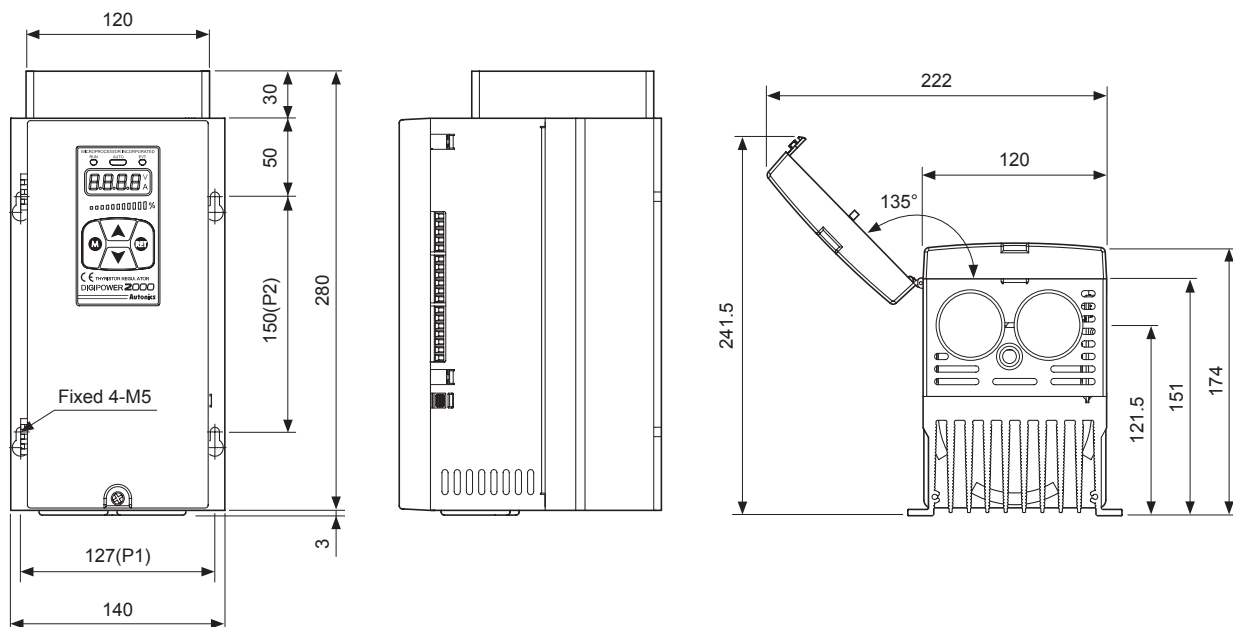


# Digital Thyristor Power Controller

## • C Size: DPU1□C - 250 / 350

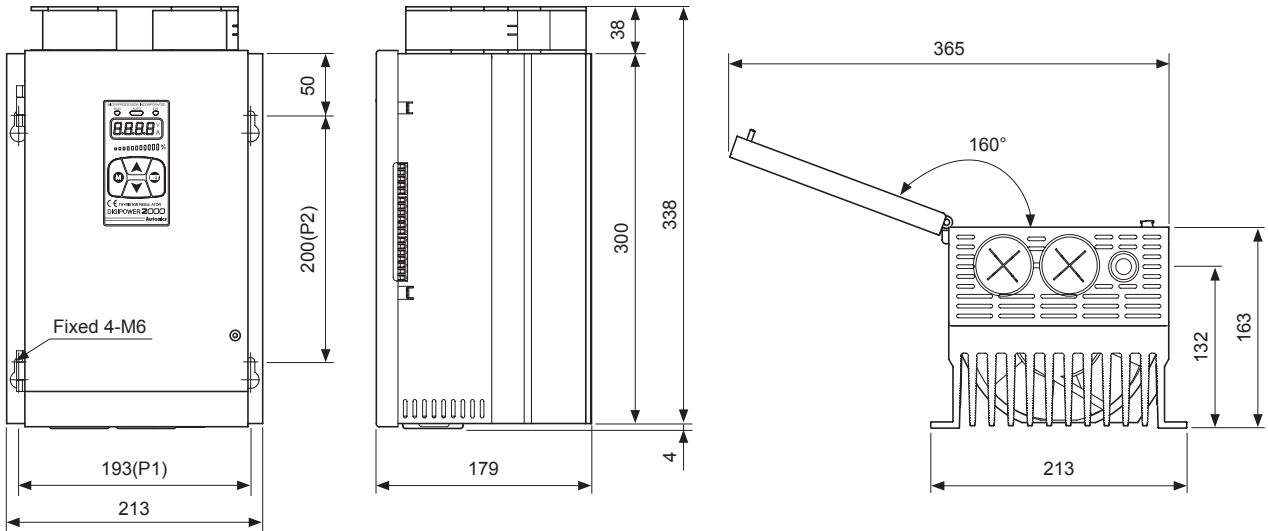


A. Recorders
B. Indicators
C. Converters
D. Controllers
<b>E. Thyristor Power Controllers</b>
F. Pressure Transmitters
G. Temperature Transmitters
H. Accessories

## • D Size: DPU1□D - 400 / 500 / 600

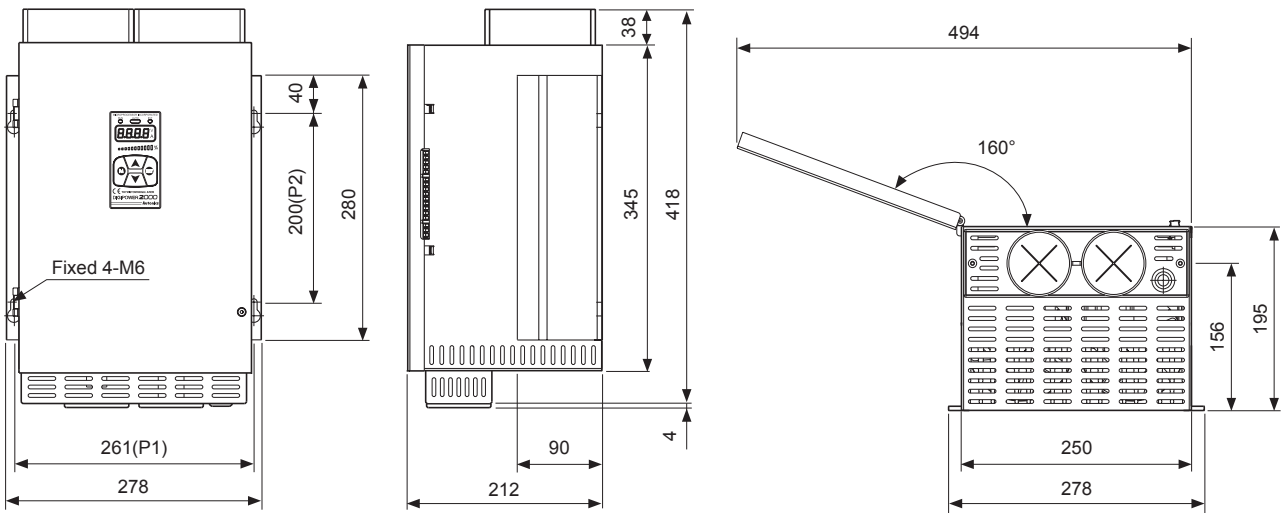

<b>DPU</b>
DPUS

⊙ In case of remote display unit + RS485 communication option,

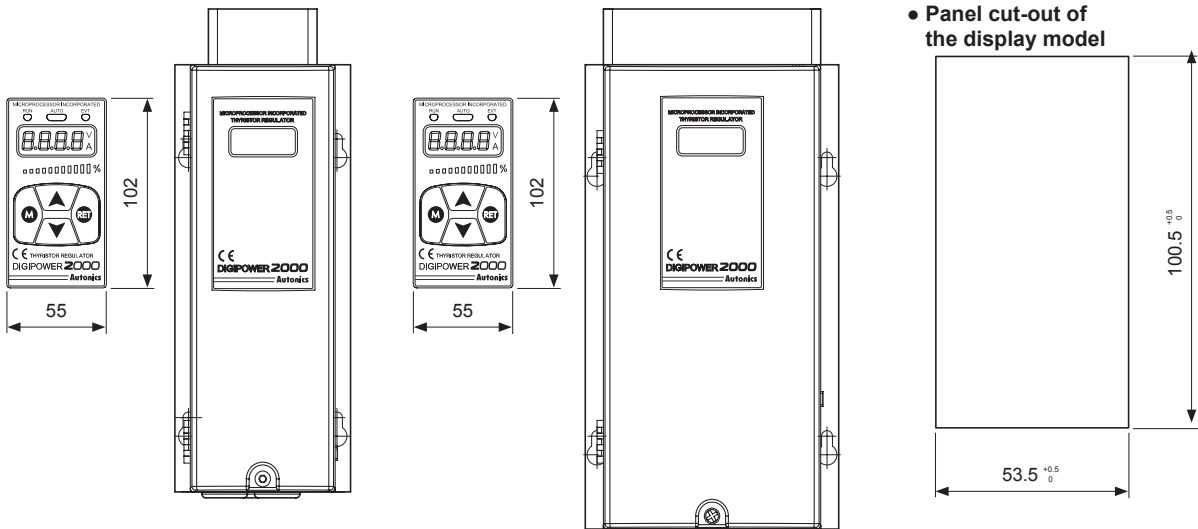


※ It is recommended for remote panel cable to use max. 5 m to prevent noise. (Check the length when ordering it.)

# DPU Series


## ■ 3-phase

(unit: mm)


### ● A Size: DPU3□A - 25 / 40 / 50

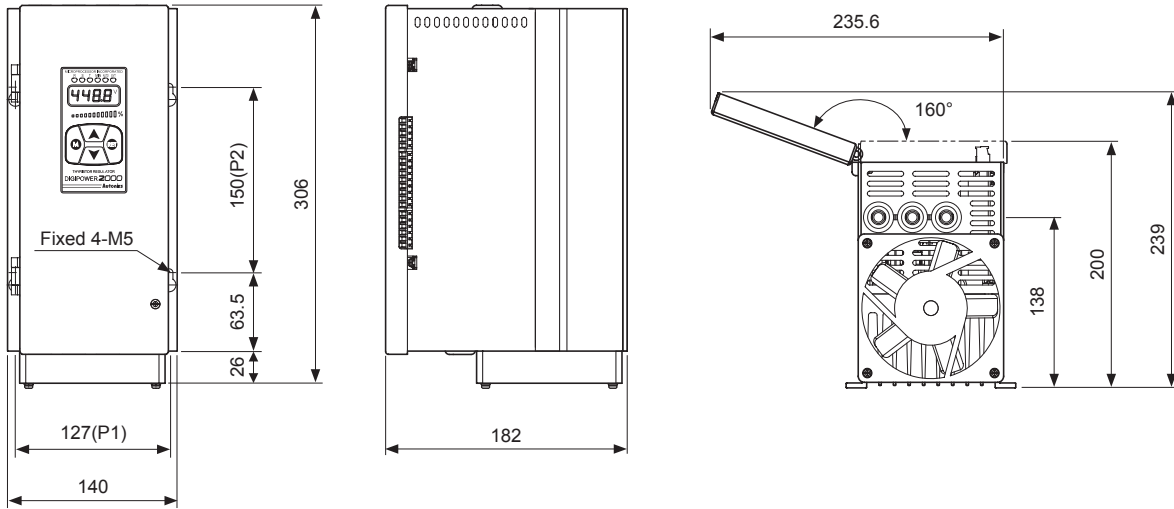

### ● B Size: DPU3□B - 70 / 80 / 100 / 120 / 150 / 180 / 200

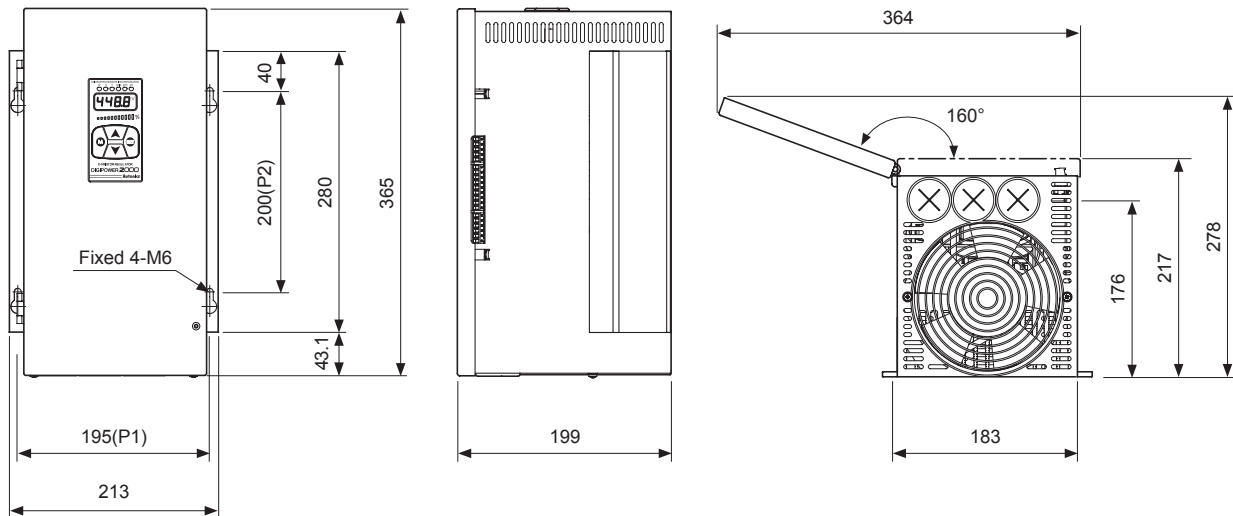


◎ In case of remote display unit + RS485 communication option,

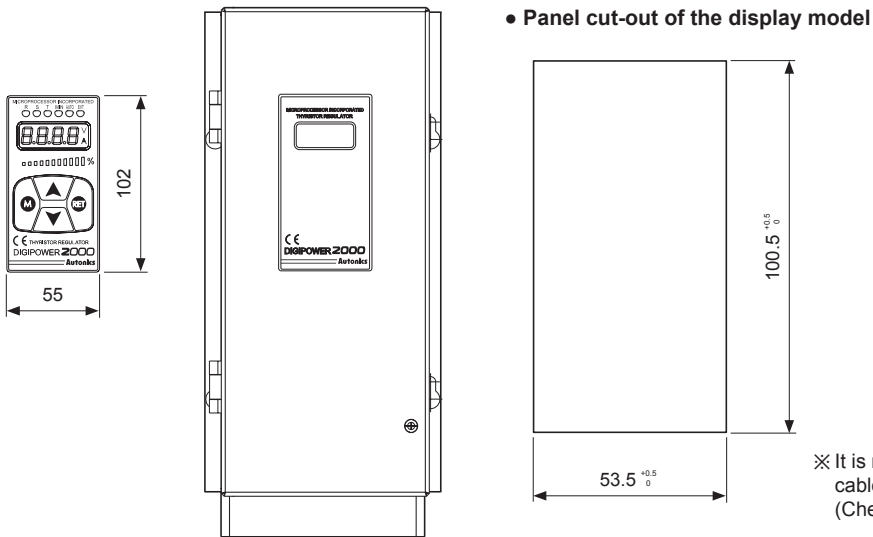


# Digital Thyristor Power Controller

## • C Size: DPU3□C - 250 / 350

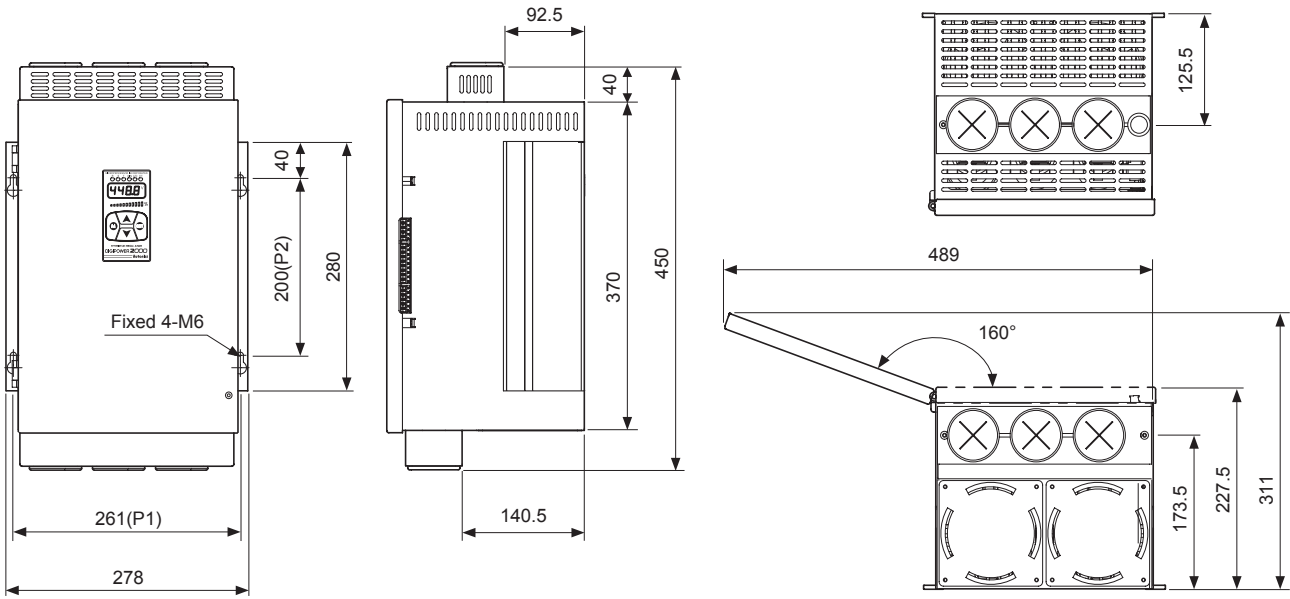

## • D Size: DPU3□D - 400 / 500 / 600

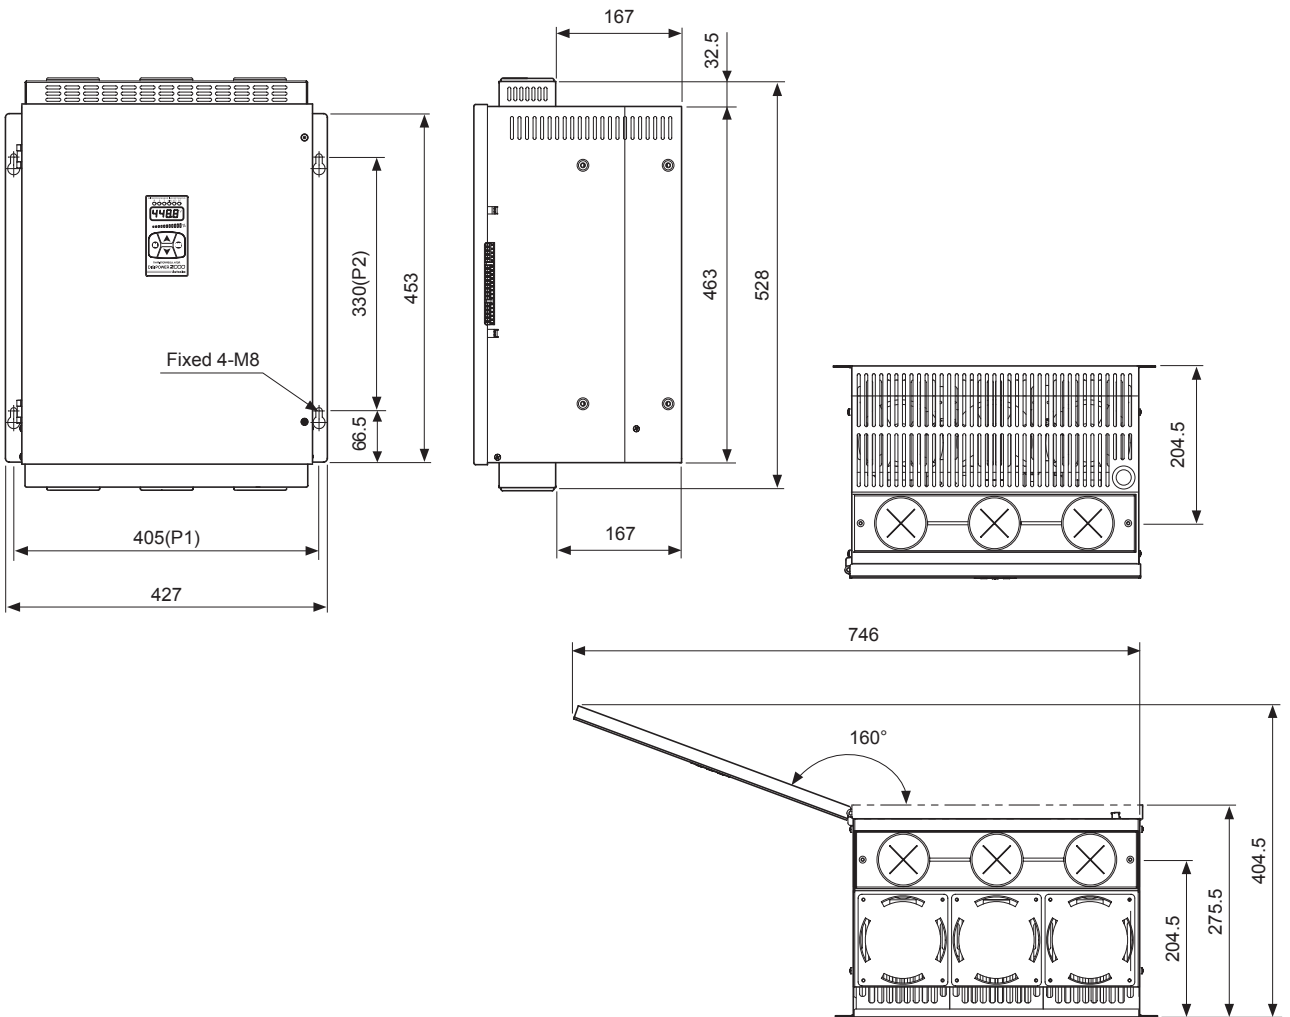


A. Recorders
B. Indicators
C. Converters
D. Controllers
<b>E. Thyristor Power Controllers</b>
F. Pressure Transmitters
G. Temperature Transmitters
H. Accessories

DPU
DPUS



# DPU Series

## Unit Description

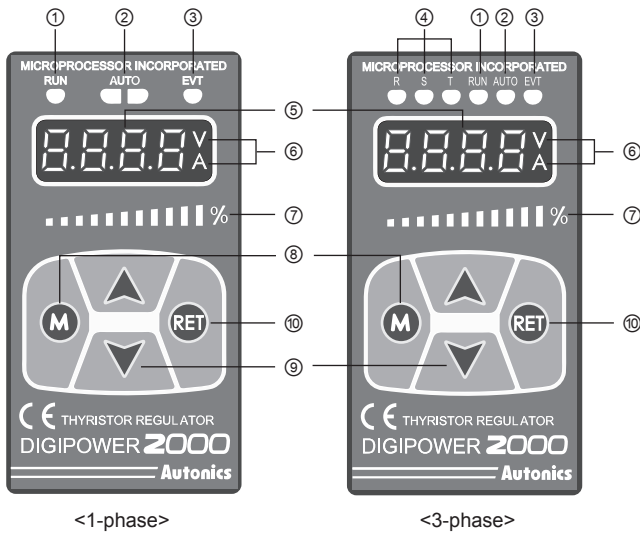

- ① RUN indicator: Turns ON in RUN, turns OFF in STOP
- ② AUTO indicator: Turns ON in AUTO, turns OFF in MANUAL
- ③ EVT indicator  
: Turns ON in Digital Input (DI-1 to 3) ON, flashes in alarm output
- ④ R, S, T indicators  
: Turns ON differently by displayed value in display part  
E.g.) When R, S turn ON, it displays voltage between R-S line
- ⑤ Display part  
: Displays selected display value content in RUN mode, displays parameter and set value in SET mode
- ⑥ V, A indicators  
: The V indicator turns ON when displaying voltage.  
The A indicator turns ON when displaying current.  
The V, A indicators turn ON when displaying power.  
The V, A indicators turn OFF when displays resistance and input value.
- ⑦ Bar display  
: Turns ON as 0 to 100% ratio for selected display value
- ⑧ M key  
: Used to enter parameter mode, monitoring mode and to move between parameters
- ⑨ ▲, ▼ key: Used to move setting modes and to set parameters.
- ⑩ RET key: Used to return to RUN mode from SET mode

## Control Input

### Input type

		Type	Parameter	
AUTO input	Analog input	Current	4-20mA	Input impedance 4-20
			0-20mA	100Ω 0-20
		Voltage	1-5VDC	Input impedance 0-5
			0-5VDC	
	ON/OFF input	Voltage pulse	0/12VDC	55r
No-voltage pulse		ON/OFF	—	
	Com. input	RS485	—	□○n
MANUAL input	Internal adjuster	10kΩ	—	—
	External adjuster	3 to 10kΩ	—	—

### Input selection

In AUTO input, select it at control input type [I n - P] at setting mode1.

In MANUAL input, set output slope manual adjustment [R - GR] in operating mode as OFF and select the input by the inside 3-level slide switch.

◎ Output slope manual adjustment [R - GR] as OFF  
: Select the input by the inside 3-level slide switch

Type	Description	
	MAN INT	Adjust output slope with the inside adjuster
	MAN EXT	Adjust output slope with an outside adjuster
	AUTO	No function

### AUTO/MANUAL selection by terminal input(DI) [terminal 7 and 11]

When the AUTO/MAN terminal input is ON(close), it is AUTO input operation. When it is OFF(open), it is MAN(manual) input operation.

When the AUTO/MAN terminal input is OFF(open) (MANUAL operation), only INT or EXT input selected by the 3-level slide switch is available.

## Functions

### SOFT START [5t - t ]

When controlling the load which has inrush current (platinum, molybdenum, tungsten, infrared lamp, etc) in power ON, or when control input changes rapidly, it prevents the load to increase output gradually within the set time. Set the time for soft start.

Regardless of control method setting (phase control or cycle control), it operates as phase control.

Set the time to reach output from 0 to 100%.


It operates when it is RUN mode from STOP status after supplying power or reset. When it reaches to the target output value, soft start function ends.

Soft start set time (t) is the time up to 100% increase of output applied to load. When the final target output value is 50%, taken time to reach is t/2.

Reaching time to the final target output value = Target output (%) × t

※ E.g.) SOFT START time: 25 sec, final target output: 80%  
0.8 × 25 = 20 sec

- Setting range: 0 to 100 sec (0 sec: not using this function)

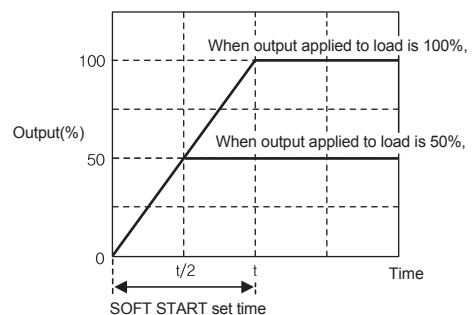


# Digital Thyristor Power Controller

## Start limit [S-Ln] and start limit time [S-Lt]

When power is ON, changing to RUN status from STOP status, or alarm reset, set limit output value and time to prevent the inrush current or error current.

Regardless of control method setting (phase control or cycle control), it operates as phase control.

- Setting range for start limit: 0 to 110% of output
- Setting range for start limit time: 0 to 100 sec (0 sec: not using this function)

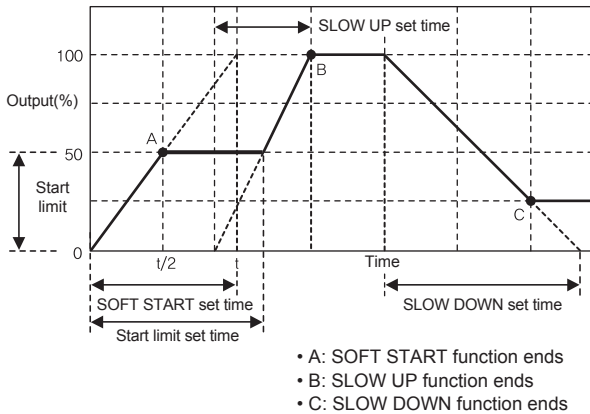


## SLOW UP / SLOW DOWN [UP-t / dn-t]

It is same purpose as soft start function. Soft start starts only one time at first but slow up/slow down function start during operation.

Regardless of control method setting (phase control or cycle control), it operates as phase control.

When it reaches to the target output value, slow up/slow down functions end.


- Setting range: 0 to 999 sec (0 sec: not using this function)

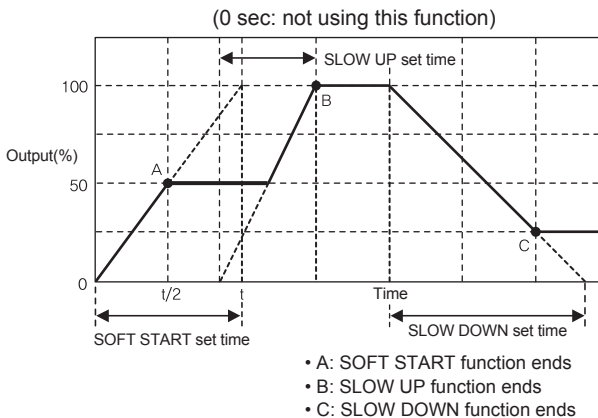

## Output slope setting [SLoP]

This function is to set output changed ratio by control input from 0.00 to 1.00 range.

- Output value when setting slope:  $\text{Input}(\%) \times \text{Slope value}$

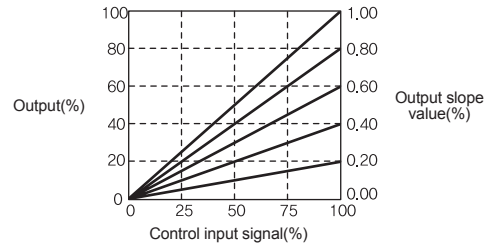


## Output slope manual adjustment [R-CR]

This function is to adjust manually (inside or outside adjuster) output value ratio for control input.

When AUTO operation and output slope manual adjustment [R-CR] is set as ON, [SLoP] is not able to set.

It displays slope value by the inside or outside adjuster input.

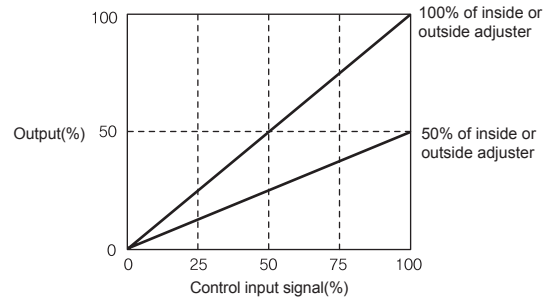


## Output slope manual adjustment [R-CR] as on : Set output slope by the inside 3-level slide switch

Type	Description
MAN INT	Adjust output slope with the inside adjuster
MAN EXT	Adjust output slope with an outside adjuster
AUTO	No function

## BASE-UP [b-UP]

This function is to add base-up set value to input signal. It is available only when output low-limit value is 0%. It is limited by start limit value at initial start.

- Setting range:  $\text{BASE-UP SV}(\%) < \text{Output high-limit value}$
- Output value for BASE-UP setting :  $\text{Input}(\%) \times \text{Slope value} + \text{BASE-UP SV}$

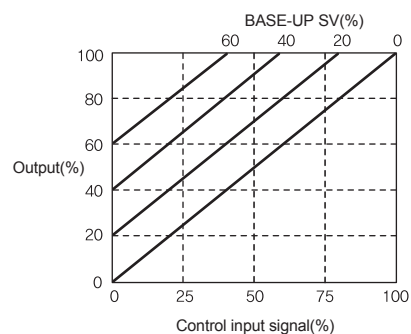

A. Recorders
B. Indicators
C. Converters
D. Controllers
E. Thyristor Power Controllers
F. Pressure Transmitters
G. Temperature Transmitters
H. Accessories

DPU


DPUS

# DPU Series

## ■ Output high limit value [H-oL], Output low limit value [L-oL]

This function is to limit output range to protect load.

- Setting range: 0 to 110%  
(Output low limit value < Output high limit value)

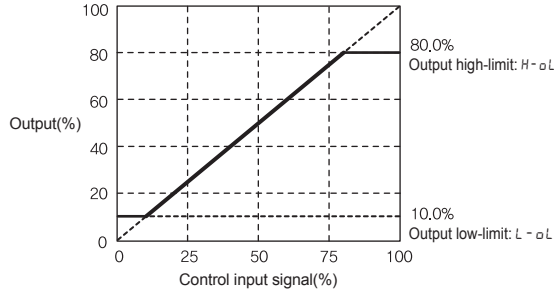


## ■ Current limit [L-Ln]

It operates when normal, static voltage, static current mode of phase control.

When using the load which has high inrush current, it restrains the current to protect thyristor.

Especially, in case of voltage feedback, only voltage current, it may over the rated current of thyristor because current flows by resistance value of the load. To prevent over the rated current, limit the current.

- Setting range: 0 to 110% of rated current

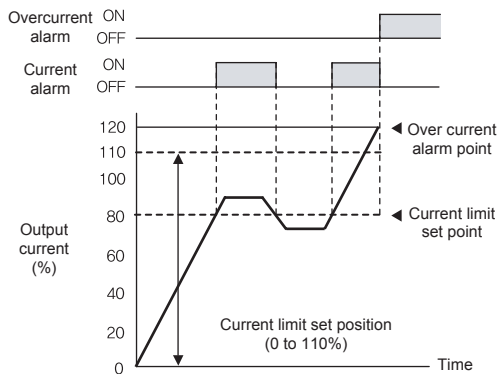


## ■ Digital input(DI)

Below functions are available by terminal input.

Digital input has five terminals; AUTO/MANUAL terminal, RUN/STOP terminal, and DI-1 to 3 terminals.

Select the function for each input terminal of DI-1 to 3.

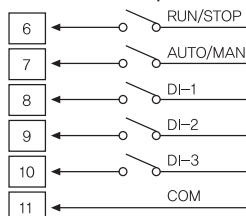

### ◎ AUTO/MANUAL selection [terminal 7 and 11]

Select AUTO(close)/MANUAL(open) input by terminal input.

AUTO mode controls output according to control input as analog input (voltage, current) or ON/OFF input (including SSR pulse input).

MANUAL mode controls according to control input as the inside adjuster adjustment or an outside adjuster adjustment.

When selecting AUTO (close), the front AUTO indicator turns ON or selecting MANUAL(open), the front AUTO indicator turns OFF.

### ◎ RUN/STOP switching [terminal 6 and 11]

Select RUN(close)/STOP(open) operation status by terminal input.

RUN mode operates as the set contents by control input. STOP mode is standby status.

When selecting RUN(close), the front RUN indicator turns ON or selecting STOP(open), the front RUN indicator turns OFF.


### ◎ Digital input(DI-1 to DI-3) setting [terminal 8, 9, 10 and 11(COM)]

Select the each function for each digital input at parameters [di-1, di-2, di-3].

When setting ON(close) to DI input, the front EVT indicator turns ON or setting OFF(open), the front EVT indicator turns OFF.

As below, there are 6 functions to select.

※ SPn is available only in di-1.

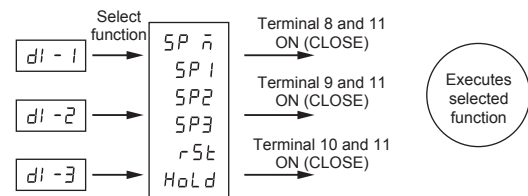

### ● RESET [rSt]

After selecting RESET function, turn digital input ON(close) and open, this unit resets and re-starts.

### ● HOLD [Hold]

After selecting HOLD function and digital input is ON(close), output and display value of this unit is hold. (it operates hold when digital input maintains ON(close) status.)

### ● Single SP [SP1, SP2, SP3]

Set [SP1, SP2, SP3] to each digital input for output to reach to the relevant SP.


It is available to set individually at [di-1, di-2, di-3], and duplicated setting is allowed.

When setting SP1, SP1 is displayed in operating mode, same as SP2 and SP3.

When this function is not set, the parameters to set SP in operating mode are not displayed.

※E.g.)

di-1	di-2	di-3	Operating Mode SP value set parameter
SP1	SP2	SP3	SP1 (e.g.: 20%)
			SP2 (e.g.: 40%)
			SP3 (e.g.: 60%)

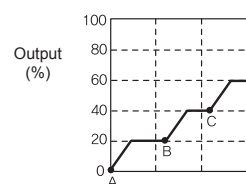

- A: When di-1 is ON
- B: When di-2 is ON
- C: When di-3 is ON

# Digital Thyristor Power Controller

## ● Multi SP [ $SP \bar{n}$ ]

It is available to set total 6 SPs and to control output depending on 3 digital inputs' setting.

This function is selectable only in [ $di - 1$ ]. When selecting [ $SP \bar{n}$ ] at [ $di - 1$ ], [ $di - 2$ ], [ $di - 3$ ] parameters are not displayed.


When selecting [ $SP \bar{n}$ ] at [ $di - 1$ ], 6 parameters to set SPs are displayed in operating mode.

( $SP 1, SP 2, SP 3, SP 4, SP 5, SP 6$ )

※E.g.)

※ ○: Close, ×: Open

	$di - 1$	$di - 2$	$di - 3$	Operating Mode SP value set parameter
A	○	×	×	$SP 1$ (e.g.: 20%)
B	×	○	×	$SP 2$ (e.g.: 40%)
C	○	○	×	$SP 3$ (e.g.: 60%)
D	×	×	○	$SP 4$ (e.g.: 80%)
E	○	×	○	$SP 5$ (e.g.: 100%)
F	×	○	○	$SP 6$ (e.g.: 0%)
G	○	○	○	—

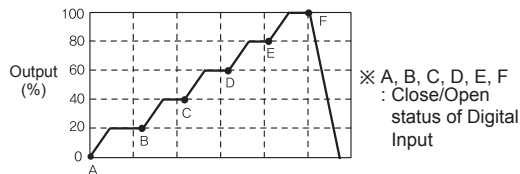

## ■ Proportional and integral constant set of feedback control

Proportional Integral Control:

This is the combination of proportional control and integral control. Proportional control operates soft control without overshoot and hunting for the set value. Integral control modifies offset automatically to reach the set value stably.

The optimal values of proportional constant and integral constant are set as factory defaults. When changing proportional constant and integral constant, it may cause response delay in feedback control or overshoot or hunting.

### ◎ Proportional constant set [ $P$ ]

It compensates error from the target value proportionally.

If proportional constant value is small, response is fast and it may cause overshoot or hunting. If proportional constant value is big, response is slow.

- Setting range: 0(0%) to 2000(100%)

### ◎ Integral constant set [ $I$ ]

It compensates cumulative error from the target value.

The set integral constant is the time when proportional value and integral value are equal.

If integral constant value is small, response is fast and it may cause overshoot or hunting. If integral constant value is big, response is slow.

- Setting range: 0.1 to 999.9 sec

※ $P, I$  parameters are displayed when control mode is static voltage, static current, static power mode in phase control.


## ■ Input correction [ $I n - b$ ]

It compensates the offset between actual input value and measured input value.

- Setting range: -99.9 to 99.9%

※E.g.) Input type is 4-20mA,

When 4mA is applied and the input monitor value displays, set [ $I n - b$ ] as -0.5 and the input monitor value displays as 0.0%.

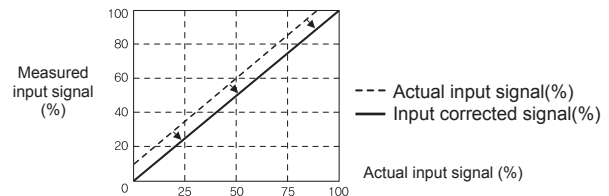


## ■ Input slope correction [ $SPRn$ ]

It compensates the gain of the measured 100% input for actual 100% input value.

- Setting range: -99.9 to 99.9%

※E.g.) Input type is 4-20mA,

When 20mA is applied and the input monitor value displays 99.5%, set [ $SPRn$ ] as 0.5 and the input monitor value is 100.0%.

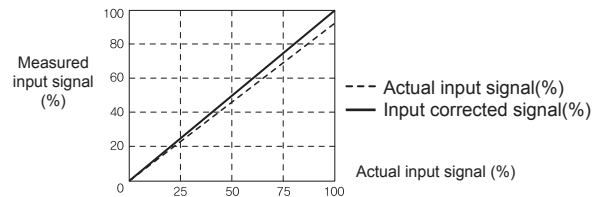

## ■ Display value content selection [ $d ISP$ ]

You can select display value content for the display part in RUN mode.

- Display range
  - 1-phase: [ $L d - U$ ], [ $R \bar{n} P$ ], [ $Y \bar{U}$ ], [ $r EF$ ]
  - 3-phase: [ $U - u$ ], [ $v - \bar{u}$ ], [ $w - U$ ], [ $L R - U$ ], [ $L R - u$ ], [ $L R - \bar{u}$ ], [ $Y \bar{U}$ ], [ $r EF$ ]

## ■ Bar graph content selection [ $bAR$ ]

You can select display value content for the bar graph.

- Display range
  - 1-phase: [ $L d - U$ ], [ $R \bar{n} P$ ], [ $Y \bar{U}$ ], [ $r EF$ ]
  - 3-phase: [ $U - u$ ], [ $v - \bar{u}$ ], [ $w - U$ ], [ $L R - U$ ], [ $L R - u$ ], [ $L R - \bar{u}$ ], [ $Y \bar{U}$ ], [ $r EF$ ]

A. Recorders

B. Indicators

C. Converters

D. Controllers

E. Thyristor Power Controllers

F. Pressure Transmitters

G. Temperature Transmitters

H. Accessories

DPU


DPUS

## ■ Load resistance display method [dRE5]

This function is for display load resistance [RE5] into a percentage in monitoring mode when disconnecting the parallel load. You can select this value as increase rate of load resistance [UP] or as decrease rate of number of loads [down].

※Decrease rate of number of loads [down] displays correct decrease rate only when the connected each load resistance is same.

E.g.)Each of R<sub>1</sub> to R<sub>10</sub> is 10Ω and load resistance (R) is 1Ω, When disconnecting R<sub>1</sub> to R<sub>5</sub>,

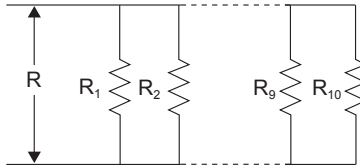

### ① Increase rate of load resistance[UP]

It is based on 100% of load resistance (R), 1Ω. When disconnected R<sub>1</sub> to R<sub>5</sub>, load resistance is 2Ω and load resistance [RE5] in monitoring mode displays 200%.

### ② Decrease rate of number of loads [down]

It is based on 100% of 10 loads(R<sub>1</sub> to R<sub>10</sub>). When disconnected R<sub>1</sub> to R<sub>5</sub>, the number of load are 5(R<sub>6</sub> to R<sub>10</sub>) and load resistance [RE5] in monitoring mode displays 50%.

## ■ Alarm

Alarm	Parameter	Operation	Clear alarm
Overcurrent alarm	o-c	※1	·Re-supply the power. ·RESET(RET key)
Overvoltage alarm	o-u		
Fuse break alarm	FUSE		
Heatsink overheat alarm	EEHP		
Element error alarm	Scr		
Heater break alarm	HbE	Continues operation	Automatically cleared within the setting range

※1: For 1-phase model, output stops.  
For 3-phase model, when 1-phase break, it maintains output and when 2-phase break, it stops output.

## ■ Lock [LoLE]

This function is to limit parameter set value check and change.

Set this parameter lock function to enter setting mode 1. When setting this parameter lock as LoL2 or LoL3, only parameter lock is displayed in setting mode 1.

Parameter	oFF	LoL1	LoL2	LoL3
Operating Mode set group	●	●	●	◐
Setting Mode 2 set group	●	●	◐	◐
Setting Mode 1 set group	●	◐	○	○

●:Enable to check and set, ◐:Enable to check/Disable to set,  
○: Disable to check

## ■ Heater disconnection alarm [Hb-A]

When load resistance display method is set as [UP], it is over the set value, this alarm occurs.

[H-bE] and display value flashes for 2 sec in turn in the display part and EVT lamp flashes for 0.5 sec.

Even though heater disconnection alarm occurs, control operation continues.

It is cleared automatically when the value is below the SV of heater disconnection alarm value.


### ◎ Heater disconnection alarm value setting [Hb-u]

Regardless of control method (phase control, cycle control), it operates. For the accurate operation, over 10% of control output (phase control, cycle control) and over 30% of rated current are required.

- Setting range: 10 to 500%

Hysteresis of heater disconnection alarm is fixed as 1% for ON/OFF interval.

E.g.)When SV for heater disconnection alarm is 50%, alarm turns ON at 50%, alarm turns OFF at 49%.

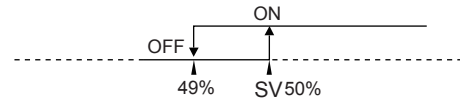

## ■ Full load auto recognition [F-Ld]

When operating load recognition function, it outputs 100% for 3 sec. Do not use this unit to the device which has problem 100% output of load.

Set [F-Ld] as on in setting mode 1 [5E-1] group and press the M key, load auto recognition function operates. According to secular changes of the load, execute this function regularly.

※Be sure that when auto recognition starts, it operates 100% output for 3 sec.

### ※Caution

Do not execute this function as on without profession's consultations. When executing this function, voltage, current outputs fully. Be sure that it may cause damage to the load.

When using special load using low voltage and high current such as (super)tantalum, SiC, molybdenum, tungsten, etc, it may cause heater break alarm [H-bE]. This alarm does not have problem in operation but it occurs when it does not detect the load when using as low voltage. Set the below notes to clear the alarm.

Note>When using special load such as (super) tantalum, SiC, molybdenum, tungsten, H-bE alarm clear method:


- Set load resistance display method [dRE5] as UP in setting mode 1 [5E-1].
- Set heater break alarm value [Hb-u] as 500 in setting mode 2 [5E-2].

# Digital Thyristor Power Controller


## Monitoring Mode

Monitoring mode can monitor measured several physical quantities of this unit, not set parameters.

### ■ 1-phase

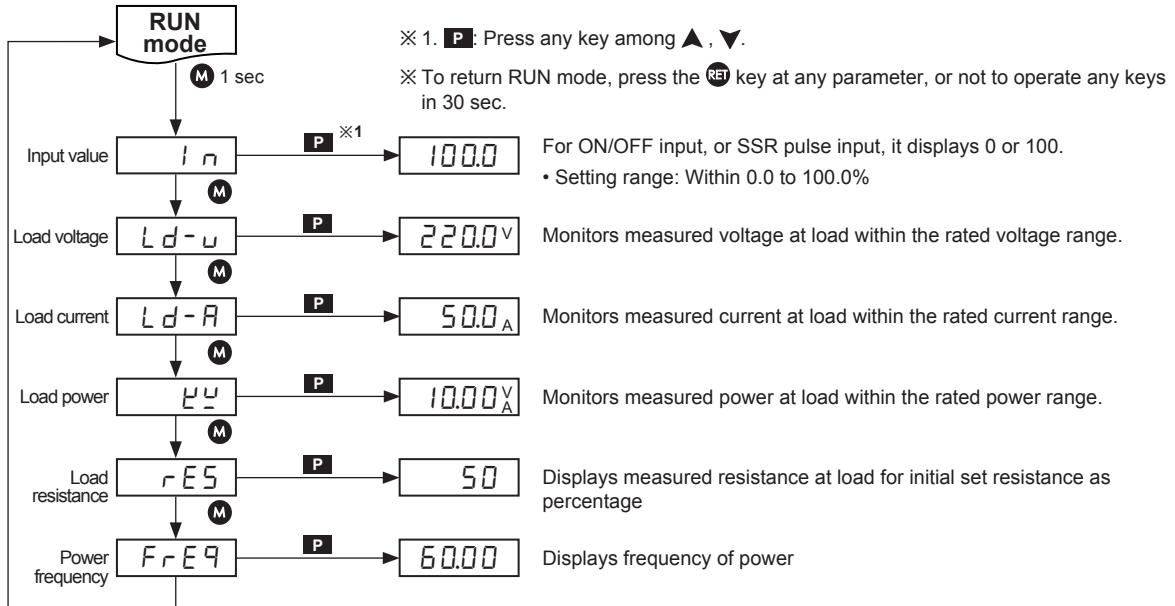

### ■ 3-phase

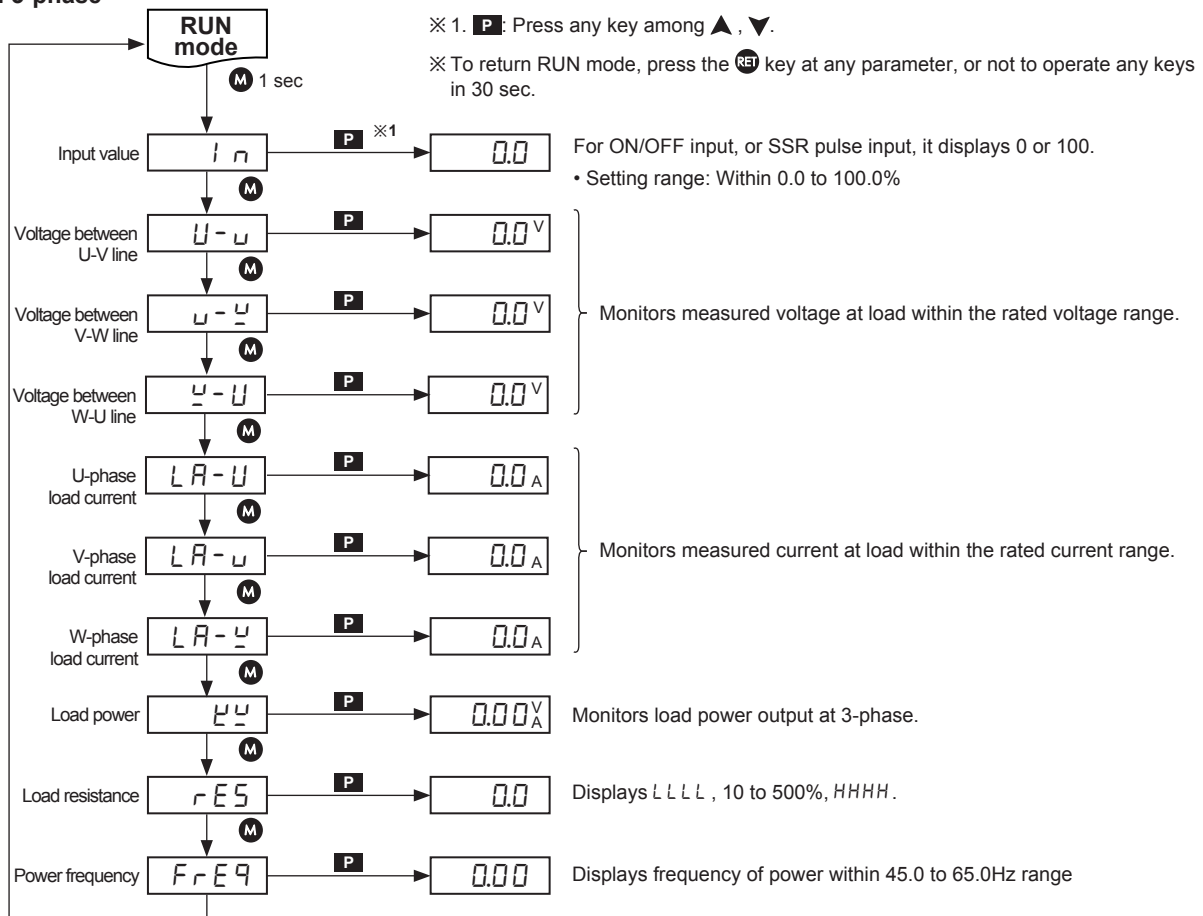

A. Recorders
B. Indicators
C. Converters
D. Controllers
<b>E. Thyristor Power Controllers</b>
F. Pressure Transmitters
G. Temperature Transmitters
H. Accessories

DPU
DPUS



# DPU Series


## Parameter Mode

### ■ Operating Mode [OP]

※ 1. **P**: Press any key among ▲, ▼.


※ To return RUN mode, press the **RET** key at any parameter, or not to operate any keys in 30 sec

※ [ ]: This parameter may or may not appear, depending on the other parameter settings.

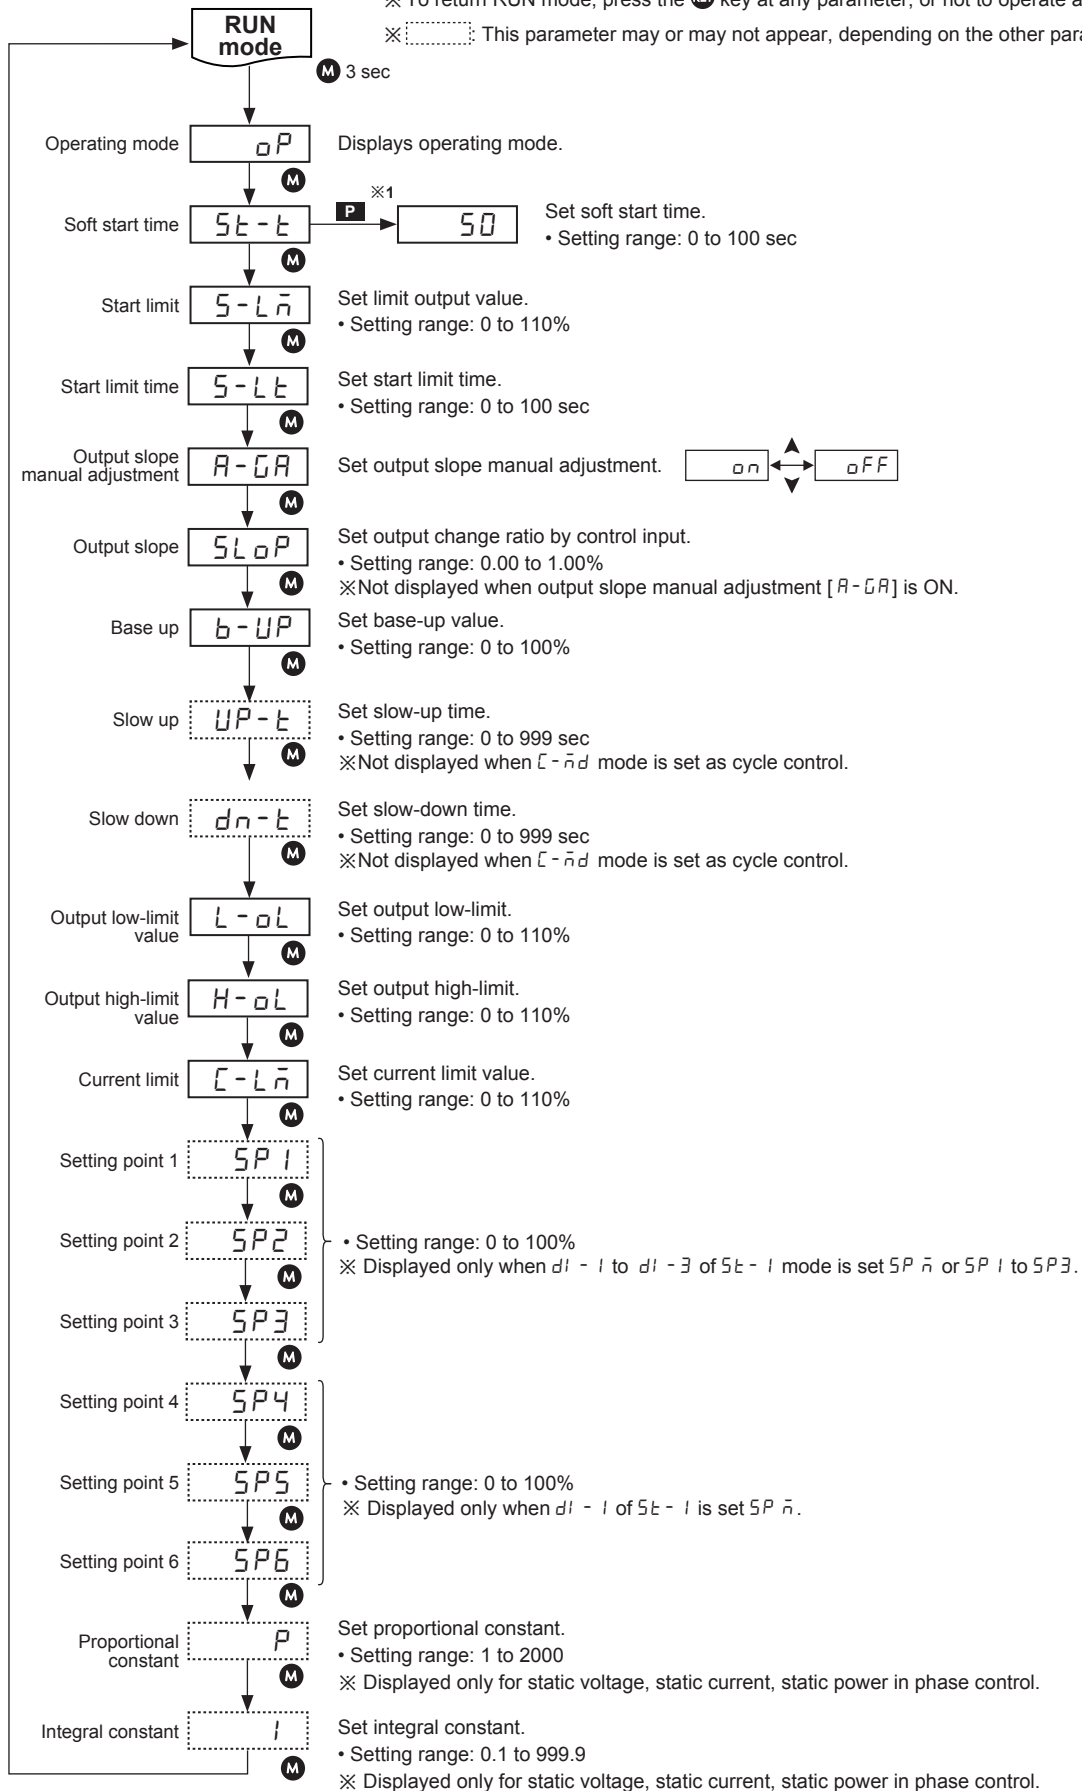

# Digital Thyristor Power Controller

## Setting Mode 1

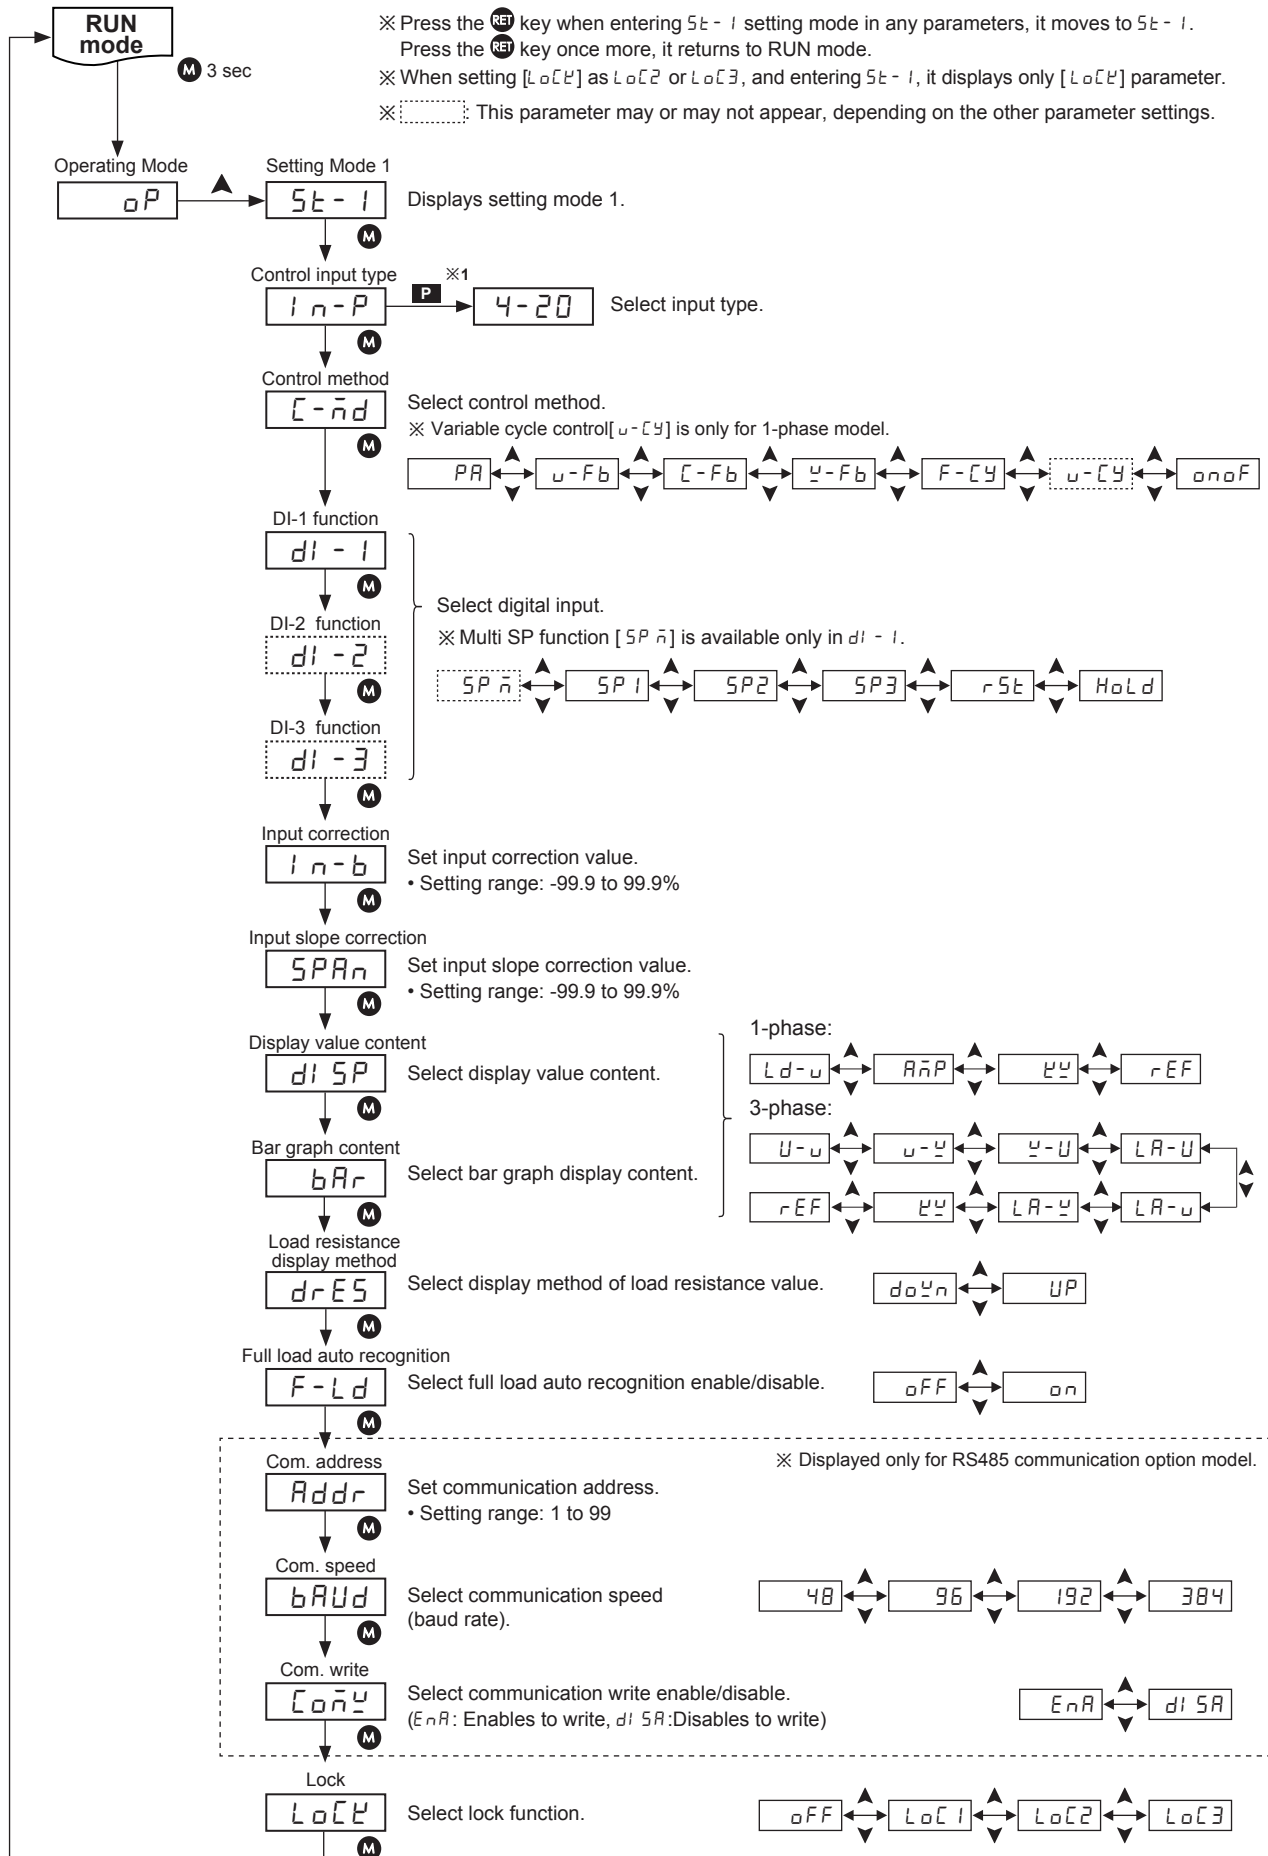


A. Recorders
B. Indicators
C. Converters
D. Controllers
<b>E. Thyristor Power Controllers</b>
F. Pressure Transmitters
G. Temperature Transmitters
H. Accessories

DPU
DPUS



# DPU Series

## ■ Setting Mode 2

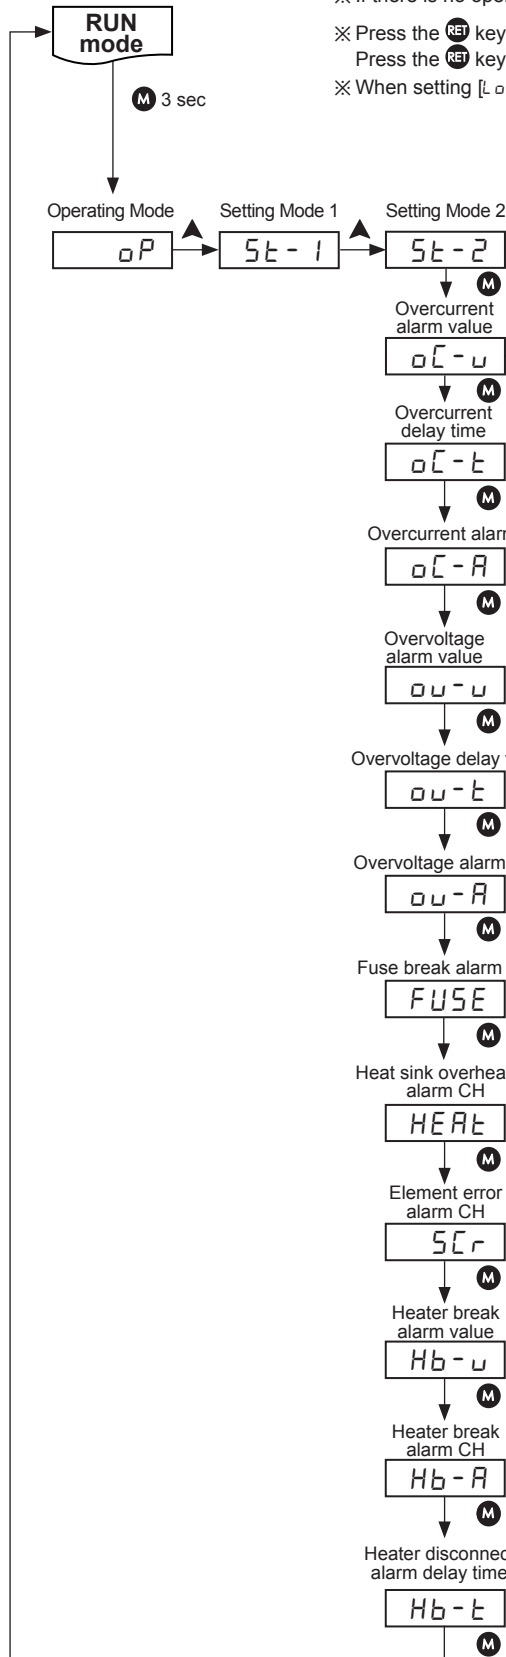

※ 1. **P**: Press any key among ▲, ▼.

※ If there is no operation any keys in 30 sec, it returns to RUN mode.

※ Press the **RET** key when entering St-2 setting mode in any parameters, it moves to St-2. Press the **RET** key once more, it returns to RUN mode.

※ When setting [LoCt] as LoC2 or LoC3, and entering St-2, it displays only [LoCt] parameter.

Displays setting mode 2.

Set alarm value for overcurrent.  
• Setting range: 0 to 120%

Set alarm delay time for overcurrent.  
• Setting range: 0 to 100 sec

Select overcurrent alarm channel.

Select alarm value for overvoltage.

• Setting range: 0 to 120% for 1-phase model, 0 to 300% for 3-phase model

Set alarm delay time for overvoltage.  
• Setting range: 0 to 100 sec

Select each alarm channel.

Set alarm value for heater break.  
• Setting range: 10 to 500%

Select heater break alarm channel.

Set heater disconnect alarm delay time.

※ Heater disconnect alarm delay time [Hb-t] is displayed in only 1-phase model.  
• Setting range: 0, 1, 2, 3, 5, 10, 20, 30 sec

# Digital Thyristor Power Controller

## Factory Default

### ■ Operating Mode

Parameter	Default	Parameter	Default	Parameter	Default	Parameter	Default
S <sub>t</sub> -t	0000	b-UP	0000	C-L <sub>n</sub>	110.0	SP5	0000
S-L <sub>n</sub>	110.0	UP-t	0003	SP1	0000	SP6	0000
S-Lt	0000	d <sub>n</sub> -t	0003	SP2	0000	P	0150
R-GR	OFF	L-oL	0000	SP3	0000	I	0200
SLoP	1.000	H-oL	110.0	SP4	0000		

### ■ Setting Mode 1

Parameter	Default	Parameter	Default	Parameter	Default	Parameter	Default
I <sub>n</sub> -P	4-20	I <sub>n</sub> -b	0000	bAr	(1-phase) u	C <sub>o</sub> n <sub>u</sub>	E <sub>n</sub> A
C-n <sub>d</sub>	PA	SPAn	0000		(3-phase) U-u	LoCt	OFF
dI-1	SP <sub>n</sub>	dI SP	(1-phase) Ld-u	F-Ld	OFF		
dI-2	SP1		(3-phase) U-u	Addr	0001		
dI-3	SP1	dRES	do <sub>u</sub> n	bAUD	384		

### ■ Setting Mode 2

Parameter	Default	Parameter	Default	Parameter	Default	Parameter	Default
oC-u	110.0	ou-u	110.0	FUSE	AL1	Hb-u	0100
oC-t	0005	ou-t	0005	HEAt	AL1	Hb-A	AL2
oC-A	AL1	ou-A	AL1	SCr	AL1	Hb-t	30

## Communications

### ■ Communication specification

Protocol	Modbus RTU
Connection type	RS485
Application standard	Compliance with EIA RS485
Max. connection	32 units (address: 01 to 64)
Synchronization method	Asynchronous
Communication method	2-wire half duplex
Communication distance	Max. 800m
Communication speed	4800, 9600, 19200, 38400bps
Communication response wait time	5 to 99ms
Start bit	1bit (fixed)
Data bit	8bit (fixed)
Parity bit	Even (fixed)
Stop bit	2-bit (fixed)

### ■ Function code format

#### ◎ Function code 3(0×03) = Read holding registers

##### ● Request (Master → Slave)

0×01	0×03	0×00	0×00	0×00	0×16	xx	xx
Add.	Com- mand	Start add.		Number of data		CRC 16	
		High	Low	High	Low	High	Low

##### ● Response (Slave → Master)

0×01	0×03	0×10	0×03	0×E8	...	0×03	0×E8	xx	xx
Add.	Response command	Number of data	1st data		...	16th data		CRC 16	
			High	Low	...	High	Low	High	Low

##### ● Error (Slave → Master)

0×01	0×83	xx	xx	xx
Address	Response command	Exception code	CRC 16	

#### ◎ Function code 4(0×04) = Read input registers

##### ● Request (Master → Slave)

0×01	0×04	0×00	0×00	0×00	0×10	xx	xx
Add.	Com- mand	Start add.		Number of data		CRC 16	
		High	Low	High	Low	High	Low

##### ● Response (Slave → Master)

0×01	0×04	0×10	0×03	0×E8	...	0×03	0×E8	xx	xx
Add.	Response command	Number of data	1st data		...	16th data		CRC 16	
			High	Low	...	High	Low	High	Low

##### ● Error (Slave → Master)

0×01	0×84	xx	xx	xx
Address	Response command	Exception code	CRC 16	

#### ◎ Function code 6(0×06) = Write single registers

##### ● Request (Master → Slave)

0×01	0×06	0×00	0×00	0×03	0×E8	xx	xx
Add.	Com- mand	Address		Number of data		CRC 16	
		High	Low	High	Low	High	Low

##### ● Response (Slave → Master)

0×01	0×06	0×00	0×00	0×03	0×E8	xx	xx
Add.	Response Command	Address		Data		CRC 16	
		High	Low	High	Low	High	Low

##### ● Error (Slave → Master)

0×01	0×86	xx	xx	xx
Address	Response command	Exception code	CRC 16	

A. Recorders

B. Indicators

C. Converters

D. Controllers

E. Thyristor  
Power  
ControllersF. Pressure  
TransmittersG. Temperature  
Transmitters

H. Accessories

DPU

DPUS

# DPU Series

## ◎ Function code 16(0×10) = Write multiple registers

### ● Request (Master → Slave)

0×01	0×10	0×00	0×00	0×00	0×10	0×20	xx	xx
Add.	Com-mand	Start add.		Number of data		Number of byte	CRC 16	
		High	Low	High	Low		High	Low

### ● Response (Slave → Master)

0×01	0×10	0×00	0×00	0×03	0×E8	xx	xx
Add.	Response command	Start add.		Number of data		CRC 16	
		High	Low	High	Low	High	Low

### ● Error (Slave → Master)

0×01	0×90	xx	xx	xx
Address	Response Command	Exception code	CRC 16	

#### ※ Exception code

- 0×01: Not supported command code
- 0×02: Starting address of required data and transmittable address are different.
- 0×03: The number of required data is over than the number of transmittable data.
- 0×04: Transmittable data does not process properly.

## ■ Address mapping table

### ◎ Input registers [1-phase]

Address	Item	Factor
300001(0000)	Output voltage	*0.1
300002(0001)	Load current	*0.1
300003(0002)	Power	*0.1
300004(0003)	Load resistance	*0.1
300005(0004)	Power frequency	*0.01
300101(0064)	Product No. H	00
300102(0065)	Product No. L	00
300103(0066)	Hardware version	10
300104(0067)	Software version	10
300105(0068)	Model name 1	"DP"
300106(0069)	Model name 2	"2-"
300107(006A)	Model name 3	"00"
300108(006B)	Model name 4	" "
300109(006C)	Model name 5	" "
300110(006D)	Model name 6	" "
300111(006E)	Model name 7	" "
300112(006F)	Model name 8	" "
300113(0070)	Model name 9	" "
300114(0071)	Model name 10	" "
300115(0072)	Reserved	Reserved
300116(0073)	Reserved	Reserved
300117(0074)	Reserved	Reserved
300118(0075)	Coil start address	0
300119(0076)	Coil quantity	0
300120(0077)	Input start address	0
300121(0078)	Input quantity	0
300122(0079)	Holding reg start address	0
300123(007A)	Holding reg quantity	32
300124(007B)	Input reg start address	0
300125(007C)	Input reg quantity	5

### ◎ Input registers [3-phase]

Address	Item	Factor
300001(0000)	Load voltage between U-V line (Vrms)	*0.1
300002(0001)	Load voltage between V-W line (Vrms)	*0.1
300003(0002)	Load voltage between W-U line (Vrms)	*0.1
300004(0003)	U-phase load current (Arms)	*0.1
300005(0004)	V-phase load current (Arms)	*0.1
300006(0005)	W-phase load current (Arms)	*0.1
300007(0006)	Power	*0.01
300008(0007)	Load resistance (% display for initial load)	*0.1
300009(0008)	Power frequency	*0.01
300101(0064)	Product No. H	00
300102(0065)	Product No. L	00
300103(0066)	Hardware version	10
300104(0067)	Software version	10
300105(0068)	Model name 1	"DP"
300106(0069)	Model name 2	"2-"
300107(006A)	Model name 3	"00"
300108(006B)	Model name 4	" "
300109(006C)	Model name 5	" "
300110(006D)	Model name 6	" "
300111(006E)	Model name 7	" "
300112(006F)	Model name 8	" "
300113(0070)	Model name 9	" "
300114(0071)	Model name 10	" "
300115(0072)	Reserved	Reserved
300116(0073)	Reserved	Reserved
300117(0074)	Reserved	Reserved
300118(0075)	Coil start address	0
300119(0076)	Coil quantity	0
300120(0077)	Input start address	0
300121(0078)	Input quantity	0
300122(0079)	Holding reg start address	0
300123(007A)	Holding reg quantity	32
300124(007B)	Input reg start address	0
300125(007C)	Input reg quantity	5

# Digital Thyristor Power Controller

## ■ Address mapping table

### ◎ Holding registers [1-phase]

Address	Item	Factor
400001(0000)	Reference value	* 0.1(1 to 1000)
400002(0001)	Start time	0 to 99
400003(0002)	Start limit	* 0.1(1 to 1000)
400004(0003)	Soft start time	0 to 99
400005(0004)	Output high-limit	* 0.1(1 to 1100)
400006(0005)	Output low-limit	* 0.1(1 to 1000)
400007(0006)	Remote SP1	* 0.1(1 to 1000)
400008(0007)	Remote SP2	* 0.1(1 to 1000)
400009(0008)	Remote SP3	* 0.1(1 to 1000)
400010(0009)	Remote SP4	* 0.1(1 to 1000)
400011(000A)	Remote SP5	* 0.1(1 to 1000)
400012(000B)	Remote SP6	* 0.1(1 to 1000)
400013(000C)	Slow up time	0 to 99
400014(000D)	Slow Stop time	0 to 99
400015(000E)	Current limit	* 0.1(1 to 2000)
400016(000F)	Over current value	* 0.1(1 to 1100)
400017(0010)	Over current time	0 to 99
400018(0011)	Over voltage value	* 0.1(1 to 1100)
400019(0012)	Over voltage time	0 to 99
400020(0013)	Load detector alarm value	* 0.1(1 to 2000)
400021(0014)	Display selected contents	0 to 3
400022(0015)	Bar graph's content	0 to 3
400023(0016)	Control integer KP value	0 to 9999
400024(0017)	Control integer KI value	* 0.1(1 to 999.9)
400025(0018)	Control method	0 to 6
400026(0019)	Digital input 1	0 to 4
400027(001A)	Digital input 2	0 to 4
400028(001B)	Digital input 3	0 to 4
400029(001C)	Auto ref input selector	0 to 3
400030(001D)	Load resistance display method	0 to 1
400031(001E)	Operation status	Bit0... Fault Bit1... I-OC Bit2... Over current Bit3... Over volt Bit4... Over temp Bit5... Fuse cut Bit6... Phase loss Bit7... Load open Bit8... Over SCR Bit9... Over Freq Bit10... Run/Stop Bit11... Auto/Manual Bit12... EMS Power Bit13... Not Load
400032(001F)	Output slope (%)	*0.001(0 to 1.000)
400033(0020)	Output (%) for input 0%	*0.01(0 to 1000)
400034(0021)	Input correction	*0.1(-999 to 999)
400035(0022)	Input slope correction	*0.1(-999 to 999)
400036(0023)	Overcurrent alarm output	0 to 2 (*1)
400038(0025)	Overvoltage alarm output	0 to 2
400039(0026)	Fuse break alarm output	
400040(0027)	Frequency error alarm output	
400041(0028)	Heatsink overheat alarm output	
400042(0029)	Element error alarm output	
400044(002B)	Heater break alarm output	

A. Recorders

B. Indicators

C. Converters

D. Controllers

E. Thyristor Power Controllers

F. Pressure Transmitters

G. Temperature Transmitters

H. Accessories

DPU

DPUS

# DPU Series

## ■ Address mapping table

### ◎ Holding registers [3-phase]

Address	Item	Parameter	Factor
400001(0000)	Reference value	$i_n$	0.0 to 100.0 (*0.1)
400002(0001)	Start time	$S_t - t$	0 to 100 (*1)
400003(0002)	Start limit	$S - L \bar{n}$	0.0 to 110.0 (*0.1)
400004(0003)	Start limit time	$S - L t$	0 to 100 (*1)
400005(0004)	Output high-limit	$H - oL$	0.0 to 110.0 (*0.1)
400006(0005)	Output low-limit	$L - oL$	0.0 to 110.0 (*0.1)
400007(0006)	Remote SP1	$SP1$	0.0 to 100.0 (*0.1)
400008(0007)	Remote SP2	$SP2$	0.0 to 100.0 (*0.1)
400009(0008)	Remote SP3	$SP3$	0.0 to 100.0 (*0.1)
400010(0009)	Remote SP4	$SP4$	0.0 to 100.0 (*0.1)
400011(000A)	Remote SP5	$SP5$	0.0 to 100.0 (*0.1)
400012(000B)	Remote SP6	$SP6$	0.0 to 100.0 (*0.1)
400013(000C)	Slow up time	$UP - t$	0 to 999 (*1)
400014(000D)	Slow down time	$dn - t$	0 to 999 (*1)
400015(000E)	Current limit	$C - L \bar{n}$	0.0 to 110.0 (*0.1)
400016(000F)	Over current value	$oC - u$	0.0 to 120.0 (*0.1)
400017(0010)	Over current time	$oC - t$	0 to 100 (*1)
400018(0011)	Over voltage value	$oV - u$	0.0 to 300.0 (*0.1)
400019(0012)	Over voltage time	$oV - t$	0 to 100 (*1)
400020(0013)	Heater break value	$Hb - u$	10.0 to 500.0 (*0.1)
400021(0014)	Display selected contents	$di SP$	0 to 7 (*1) 0: U-V 1: V-W 2: W-U 3: LA-U 4: LA-V 5: LA-W 6: KW 7: REF
400022(0015)	Bar graph's content	$bAR$	
400023(0016)	Proportional value	$P$	1 to 2000 (*1)
400024(0017)	Integral value	$i$	0.1 to 999.9 (*0.1)
400025(0018)	Control method	$C - \bar{n}d$	1 to 6 (*1) 1: F-CY 2: ONOF 3: PA 4: V-FB 5: C-FB 6: W-FB
400026(0019)	Digital input 1	$di - 1$	0 to 5 (*1) 0: SP-M 1: SP-1 2: SP-2 3: SP-3 4: RST 5: HOLD
400027(001A)	Digital input 2	$di - 2$	1 to 5 (*1) 1: SP-1 2: SP-2 3: SP-3 4: RST 5: HOLD
400028(001B)	Digital input 3	$di - 3$	
400029(001C)	Control input type	$i_n - P$	0 to 6 (*1) 0: 4-20 1: 0-20 2: 1-5 3: 0-5 4: 0-10 5: SSR 6: COM
400030(001D)	Load resistance display method selection	$dr ES$	0 to 1(*1) 0: DOWN 1: UP
400031(001E)	Operation status	-	Bit0... Fault Bit1... I-OC Bit2... Over current Bit3... Over volt Bit4... Over temp Bit5... Fuse cut Bit6... Phase loss Bit7... Load open Bit8... Over SCR Bit9... Over Freq Bit10... Run/Stop Bit11... Auto/Manual Bit12... EMS Power
400032(001F)	Output slope	$SL oP$	0.000 to 1.000 (*0.001)
400033(0020)	Base up setting	$b - UP$	0.0 to 100.0 (*0.1)
400034(0021)	Input correction	$i_n - b$	-99.9 to +99.9 (*0.1)
400035(0022)	Input slope correction	$SPR n$	-99.9 to +99.9 (*0.1)
400036(0023)	Overcurrent alarm output	$oC - R$	0 to 2 (*1) 0: NON 1: AL1 2: AL2
400038(0025)	Overvoltage alarm output	$oV - R$	
400039(0026)	Fuse break alarm output	$FUSE$	
400041(0028)	Heatsink overheat alarm output	$HER t$	
400042(0029)	Element error alarm output	$SC r$	
400044(002B)	Heater break alarm output	$Hb - R$	

# Digital Thyristor Power Controller

## Proper Usage

- Do not use the unit outdoors. Failure to follow this instruction may result in electric shock or shorten the life cycle of the unit.
- Caution for usage (Do not install this unit at the following places.)
  - The place where ambient temperature is over -10 to 50°C range.
  - The place where ambient humidity is over 5 to 90%RH.
  - The place where temperature changes are rapid and there is dew condensation.
  - The place where there is corrosive gas (especially oil gas, ammonia, etc), or flammable gas.
  - The place where there is vibration or shock to the unit.
  - The place where there is water, oil, drug, or steam.
  - The place where there is lots of dust and dirt, salinity, or iron.
  - The place where big inducement malfunction, static, or magnetism noise occurs easily.
  - The place where there is direct ray of the sun.
  - The place where thermal heat builds up by radiant heat.
  - Do not open the cover automatically to move this unit.
- Installations
  - Tighten this unit with bolts as accessories on the panel.
  - If water enters this unit, you must inspect this unit. It may cause short circuit, or a fire.
  - When installing this unit, use safety protections such as safety shoes, and helmet, etc and be sure that the safety.
  - Be sure that not to put the legs or sit on this unit.
- Temporary storage
  - Fix this unit with transportation screws to store this unit temporarily.
  - Store this unit as below environments.
  - The place where there is no dregs, flammable gas, explosive gas (SO<sub>2</sub>, H<sub>2</sub>SO, etc).
  - The place where there is no vibration, shock.
  - The place where there is no steam or not too much hot humidity (95%RH).
  - The place where it is not extreme low temperature (below -20°C).
- Caution for wiring
  - Do not use empty terminals during wiring I/O to other usage.
  - Consider a countermeasure for lots of noises.
- Cleaning
  - In cleaning the unit, use dry cloth.
  - Do not use organic solvent.
  - Turn off the power to clean this unit.

A. Recorders

B. Indicators

C. Converters

D. Controllers

E. Thyristor  
Power  
Controllers

F. Pressure  
Transmitters

G. Temperature  
Transmitters

H. Accessories

DPU

DPUS