




# WECON

# LX3V-2ADV-BD

# Module

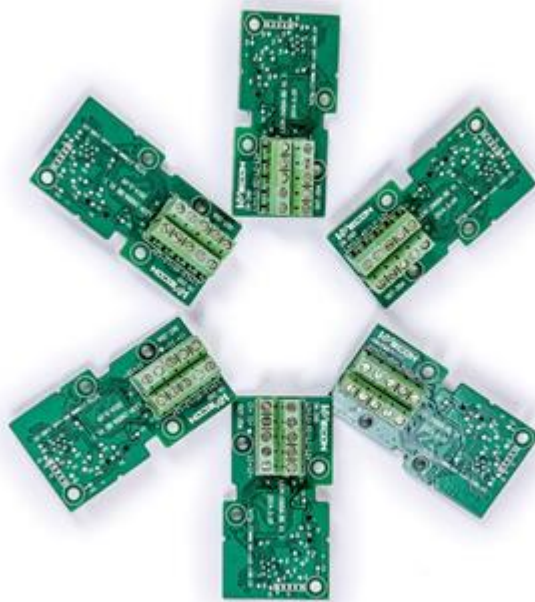

**Website:** <http://www.we-con.com.cn/en>

**Technical Support:** [liux@we-con.com.cn](mailto:liux@we-con.com.cn)

**Skype:** “fcwkkj” or “Jason.chen842”

**Phone:** 86-591-87868869

**QQ Group:** 465230233

**Technical forum:** <http://wecon.freeforums.net/>



# 1. Mounting instruction

Make sure to power off the PLC before mounting the LX3V-2ADI-BD module and removing the top cover of PLC, screwed to the PLC.

**Caution:**

- 1) This BD module only support the following firmware versions or later. Users can check the PLC firmware version in D8001.
  - LX3VP:25103;
  - LX3V-A2:25015;
  - LX3V-LX3VE:25201;
  - A1:22007;
  - LX2VA:24006;

When mounting module to PLC, all the lights are blinking after power ON PLC please upgrade the firmware of PLC.

- 2) Please fixed BD module on the PLC, poor contact may lead to failure.
- 3) BD module and top cover of PLC's tightening torque is 0.3 ~ 0.6 N.m.

**Warring:**

Make sure to power off the PLC before mounting or removing the BD module and put the cover in right place

# 2. Special feature

- 1) LX3V-2ADV-BD module equips with 2 channels analog input. This module will be mounted in the PLC.
- 2) The input voltage of LX3V-2ADV-BD module between -10 to 10V, and the digital value will be saved in special system address, but the numerical relationship between input and output value cannot be changed.


Table 2-1

Expansion port 1 (far away from PLC light )		
Address	Description	
M8112	The flag of switching input mode in CH1 OFF: Voltage input mode (-10V~10V, -2000~2000)	ON: Retain
M8113	The flag of switching Input mode in CH2 OFF: Voltage input mode (-10V~10V, -2000~2000)	
D8112	The digital value of channel 1; (-10V~10V, -2000~2000)	

D8113	The digital value of channel 2; (-10V~10V, -2000~2000)	
<b>Expansion port 2 (from the PLC light near)</b>		
Address	Description	
M8116	The flag of switching Input mode in CH1 OFF: Voltage input mode (-10V~10V, -2000~2000)	ON: Retain
M8117	The flag of switching Input mode in CH2 OFF: Voltage input mode (-10V~10V, -2000~2000)	
D8116	The digital value of channel 1; (-10V~10V, -2000~2000)	
D8117	The digital value of channel 2; (-10V~10V, -2000~2000)	

### 3. Dimension

Table 3-1

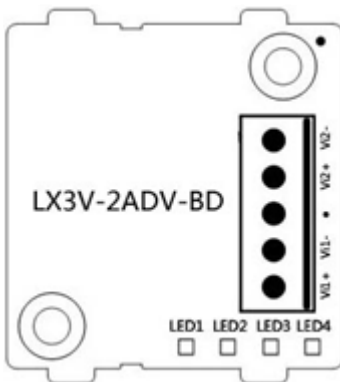

IN-2ADV input voltage range: -10~10V	
Vi1+	Anode of the channel 1 voltage input
Vi1-	Cathode of the channel 1 voltage input
•	No connection
Vi2+	Anode of the channel 2 voltage input
Vi2-	Cathode of the channel 2 voltage input

#### LED lights indicating:

- 1) LED1: ON when power ON.
- 2) LED2: flashes when communications.
- 3) LED3 (AD 1): On indicates enable, OFF indicates disable, flicker indicates exceeding the measurement range.
- 4) LED4 (AD 2): On indicates enable, OFF indicates disable, flicker indicates exceeding the measurement range.

If the BD module is plugged into the old firmware version when on the host, all LEDs will be flashing.

### 4. Specification

- 1) Please refer to the LX3V user manual for the general specification of LX3V-2ADV-BD.
- 2) LX3V-2ADV-BD is powered supply by LX3V main unit.

Table 4-1

Item	Specification
------	---------------

	Voltage input
Input range	DC -10 ~ 10V (Input resistance:150KΩ)
Digital output	12 bits binary
Resolution	4mV (10 : 1/2000)
Precision	±1%
AD conversion time	One PLC scanning cycle
Characteristic	
Insulation	No insulation in each PLC channel
Occupied points	None

## 5. Wiring

### Caution:

- 1) Don't put the LX3V-2ADV-BD module near high-voltage power cable. Keep away the power cable at least 100mm;
- 2) Do not solder any terminal with the others device;
- 3) Do not connect any unsuitable cable;
- 4) Please fix cable;
- 5) Do not connect any unit to the unused terminal;


### 5.1 Suitable cable

Connect to output device with AWG25-16.

Max tighten torque of terminal is 0.5 to 0.6N.m.

Table 5-1

Line type	Cross sectional area(mm <sup>2</sup> )	End-of-pipe treatment
AWG26	0.1288	Stranded cable: stripped jacket, rub

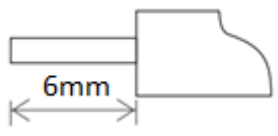.....	.....	Conductor, then connect the cable. Single-core cable: stripped jacket, Then connect the cable.	
AWG16	1.309		

## 5.2 Input

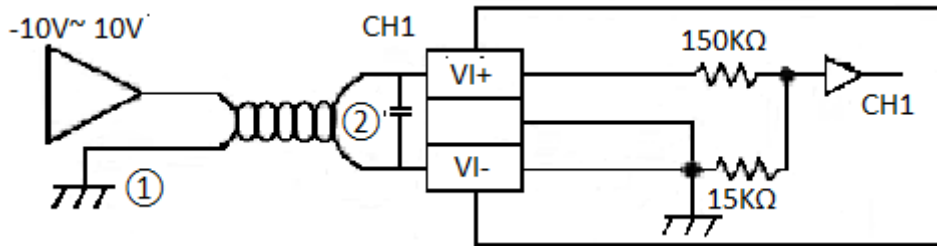


Figure 5-1

## 6. Example


The input analog of all channels (-10V~10V) is stored inside the data memory (D8112, D8113) in the form of data. Values will be automatically stored when the “END” order is sent out. The value is calculated by the designated analog data conversion characteristics of the special auxiliary relays M8112 and M8113.

### 6.1 Basic Program Examples

**Notes:**

- 1) Start M8112 and M8113; designate the analog data conversion characteristics of CH1 and CH2.
- 2) After execution of analog data conversion, do not change the values of D8112 or D8113 through operator program, programming tools or graphic operating terminal.

The following program can set CH1 and CH2 into voltage input mode. After ADV conversion, values of all channels are stored into D0 and D2.

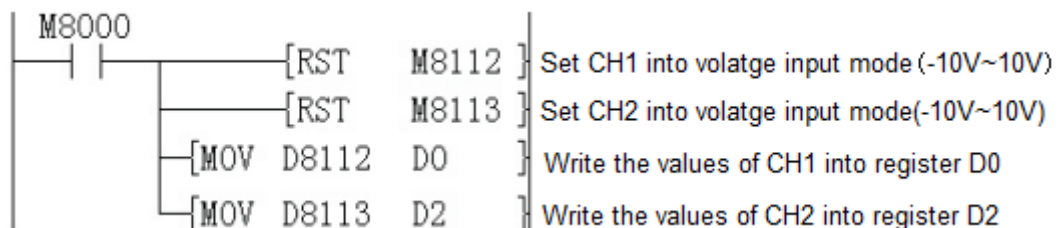

## 6.2 Examples of Applications

Since the LX3V-2ADV-BD does not have offset and gain functions, if it needs for the values out of the standard specifications, Additional programming orders will be needed to multiply or divide the converted value.

### Notes:

- 1) Since the use of additional programming orders, the converted precision and resolution of the analog value are different with the specifications.
- 2) The original range of the analog output does not change.

### Voltage Input Mode

Under the voltage input mode, the 2ADV will convert the analog value -10V~10V into data output -2000~2000. If the data range used in the application is 0-20000, then the range -2000~2000 must be converted into 0-20000, as is shown in the following program examples. The data converted from the analog values are stored in D8112 or D8113.

Since the data range is converted from -2000~2000 into 0-20000, therefore the resolution of the analog input is no longer just 8uA.

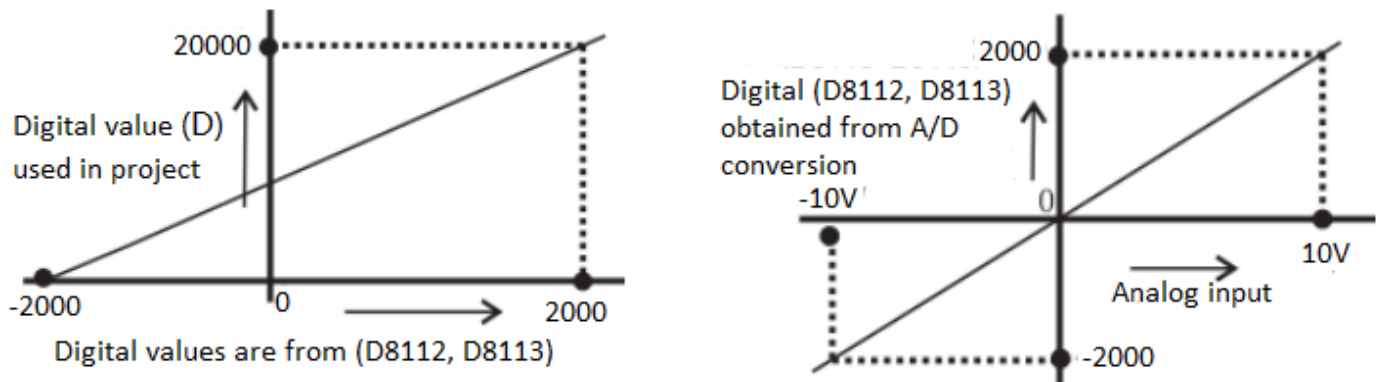


Figure 6-1

If the data range used in D0 is (0-20000), please refer to the following text: Figures used in the user's applications:  $D0=5 \times (D8112 \text{ or } D8113)+10000$ .

We can give an example as follows based on the program of the above mentioned formula (under the situation of CH1)

```

M8000
┌───┴───┐
├───┬───┤ [RST M8112]
├───┬───┤ [MUL K5 D8112 D2]
└───┬───┤ [ADD D2 K10000 D0]

```